

EE 330

Lecture 8


Stick Diagrams

Technology Files

- Design Rules
- Process Flow
- Model Parameters

Review from Last Time

Response time of logic gates

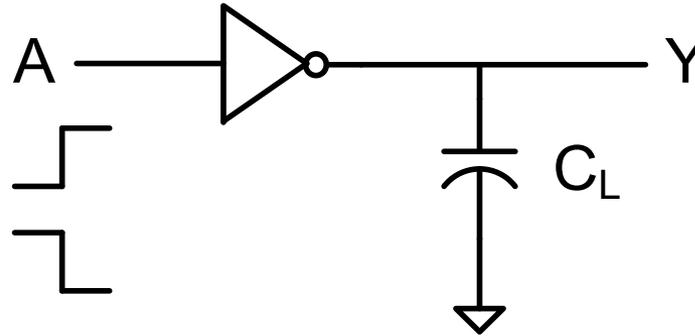


$$t_{HL} \cong R_{SWn} C_L$$

$$t_{LH} \cong R_{SWp} C_L$$

- Logic Circuits can operate very fast
- Extremely small parasitic capacitances play key role in speed of a circuit

Review from Last Time


One gate often drives one or more other gates !

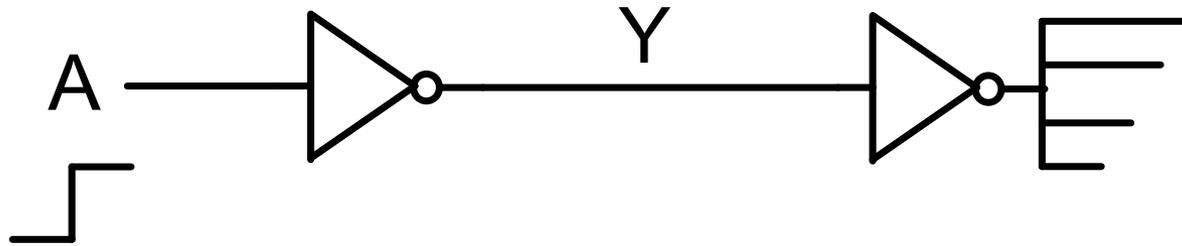

What are t_{HL} and t_{LH} ?


Review from Last Time

Example: What is the delay of a minimum-sized inverter driving another identical device?




Load on first inverter

C_{GSn} and C_{GSp} both 1.5fF

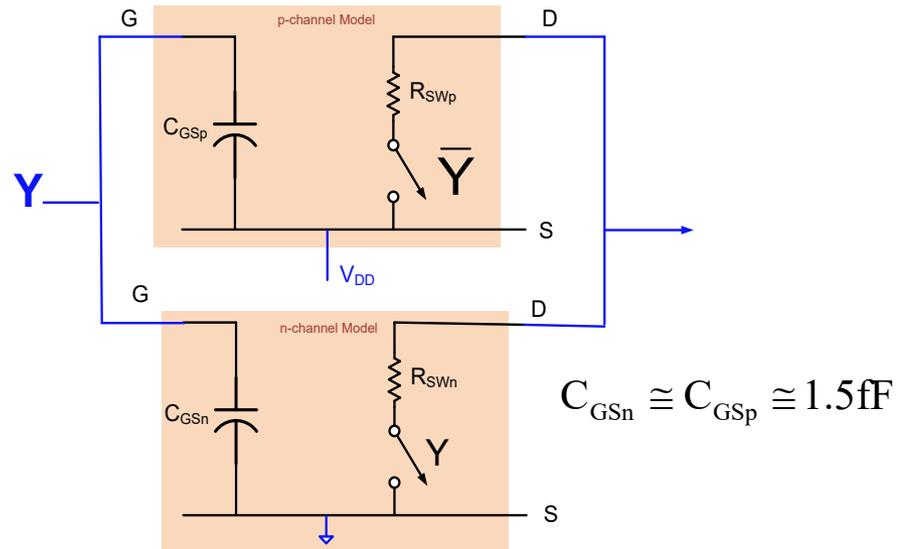



Loading effects same whether C_{GSp} and/or C_{GSn} connected to V_{DD} or GND

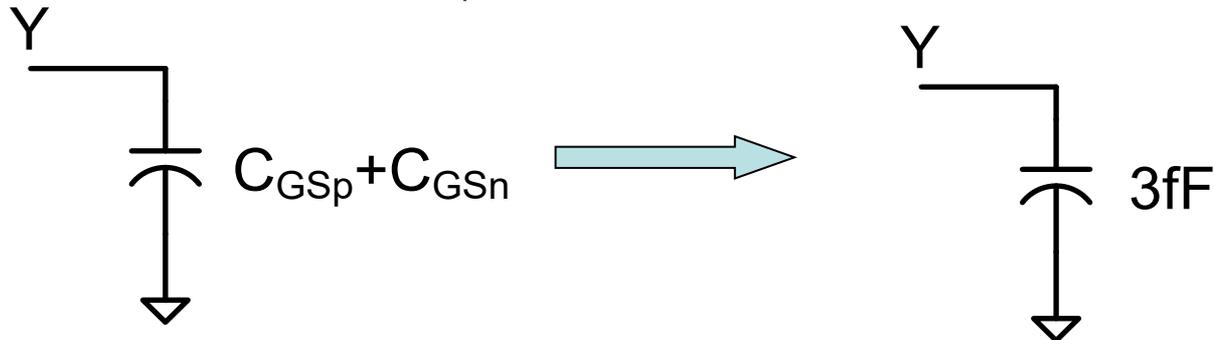

For convenience, will reference both to ground

Review from Last Time

Example: What is the delay of a minimum-sized inverter driving another identical device?

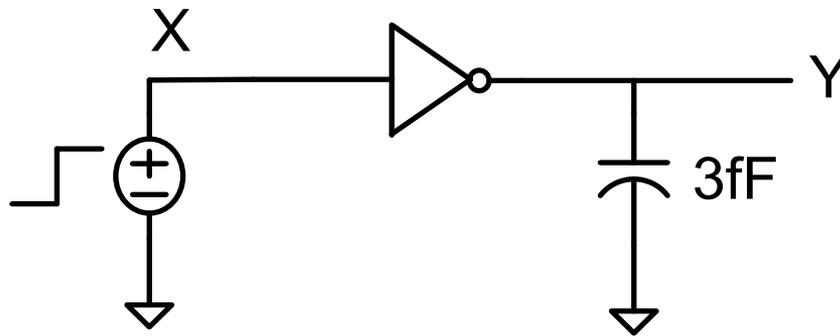

$$t_{HL} \cong R_{SWn} C_L = 2K \bullet 3fF = 6p \text{ sec}$$

$$t_{LH} \cong R_{SWp} C_L = 6K \bullet 3fF = 18p \text{ sec}$$


Do gates really operate this fast?

What would be the maximum clock rate for acceptable operation?

Stick Diagrams



- It is often necessary to obtain information about placement, interconnect and physical-layer structure
- Stick diagrams are often used for small component-count blocks
- Approximate placement, routing, and area information can be obtained rather quickly with the use of stick diagrams

Stick Diagrams

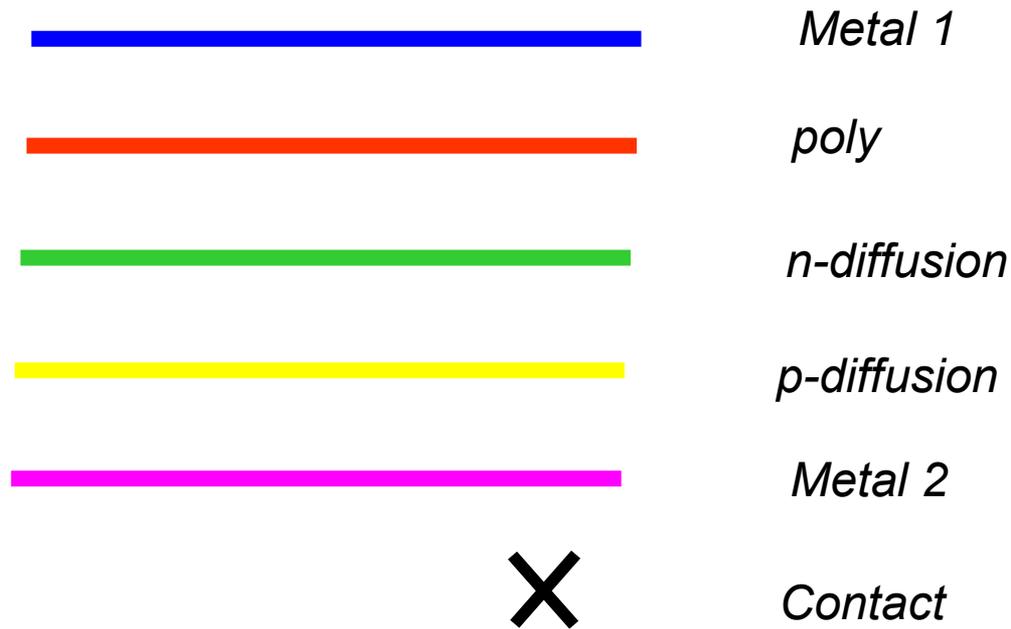

Additional layers can be added and color conventions are personal

Stick Diagram

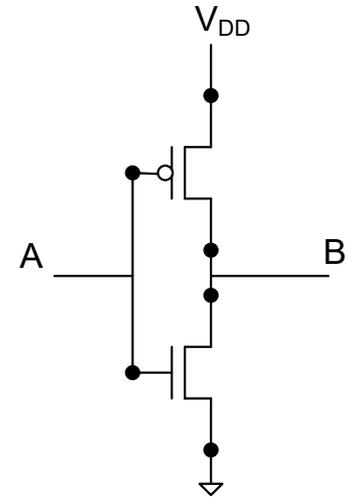
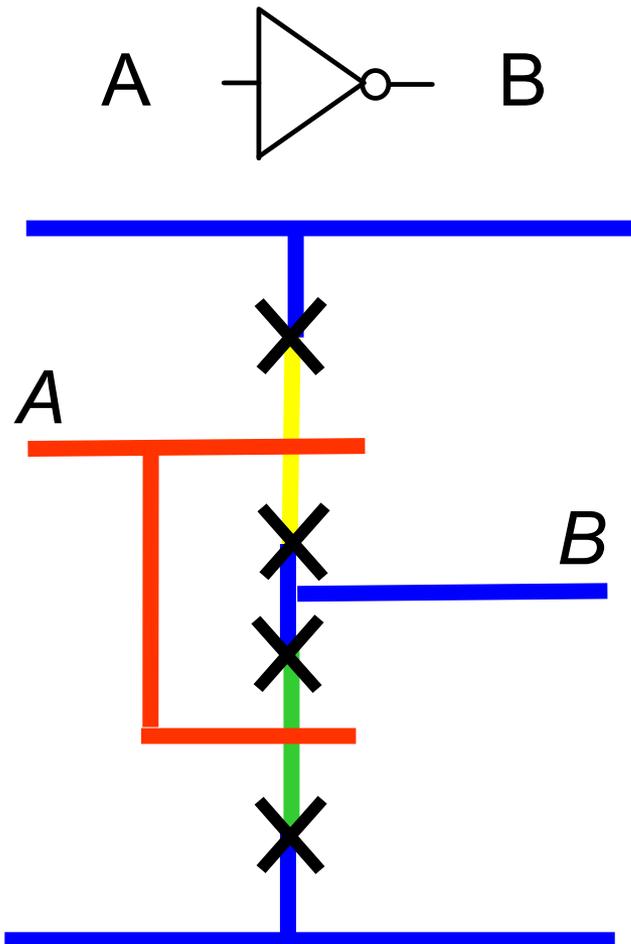


A stick diagram is not a layout but gives the basic structure (including location,, orientation and interconnects) that will be instantiated in the actual layout itself



Modifications can be made much more quickly on a stick diagram than on a layout

Iteration may be needed to come up with a good layout structure



Stick Diagram

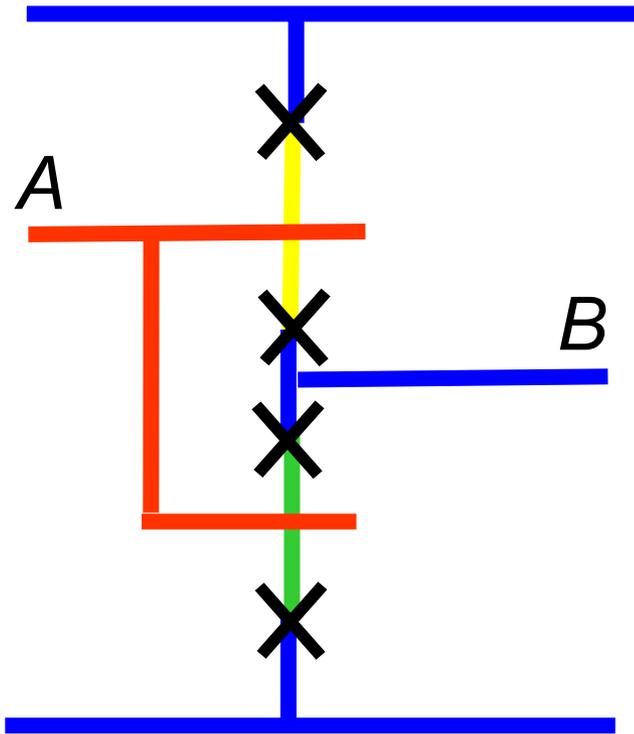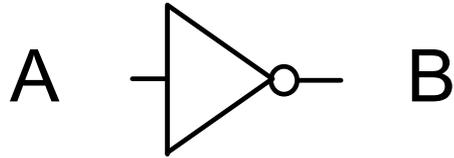

Alternate Representations

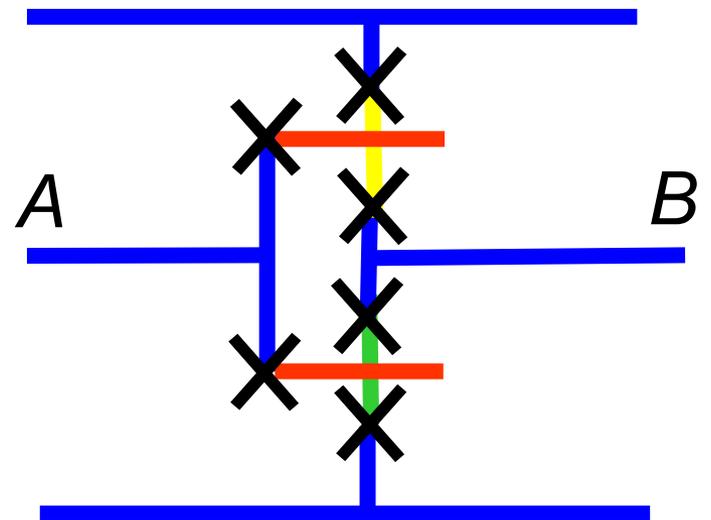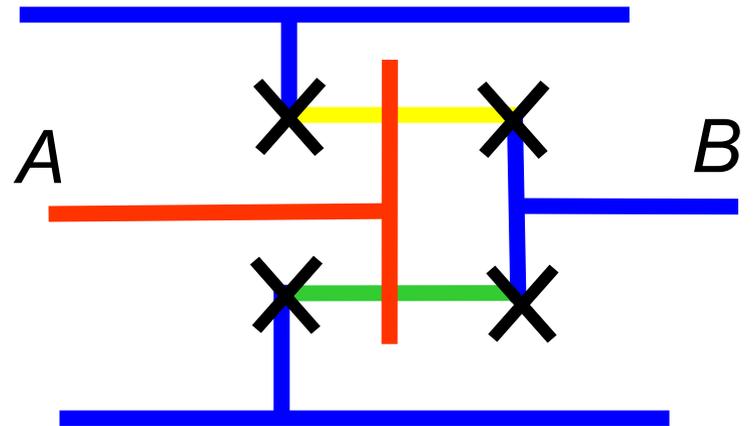


Stick Diagram

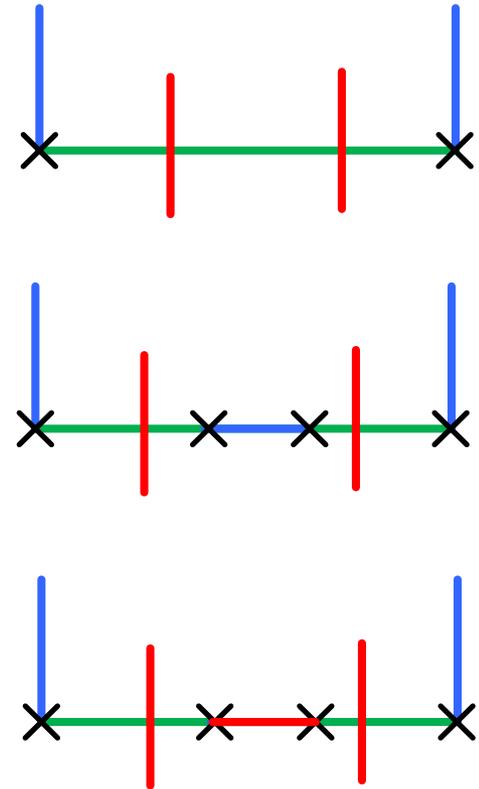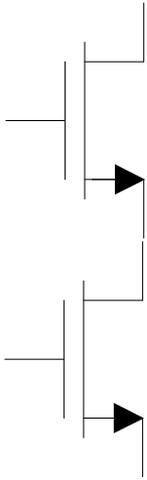

- Source and drain notation suppressed
- Shared active can serve as interconnect
- No contact needed to shared active
- Multiple ways to layout even simple circuits

Technology Files

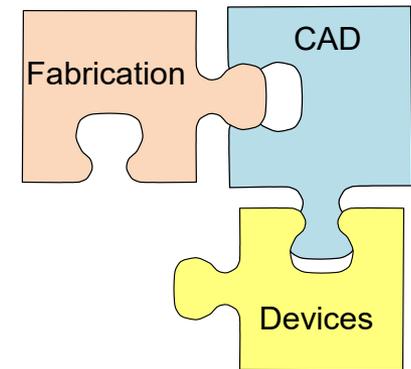

- Provide Information About Process
 - Design Rules
 - Process Flow (Fabrication Technology)
 - Model Parameters
- Serve as Interface Between Design Engineer and Process Engineer
- Insist on getting information that is deemed important for a design
 - Limited information available in academia
 - Foundries often sensitive to who gets access to information
 - Customer success and satisfaction is critical to foundries

Technology Files

- Design Rules
- Process Flow (Fabrication Technology) (will discuss next)
- Model Parameters (will discuss in substantially more detail after device operation and more advanced models are introduced)

First – A preview of what the technology files look like !

Typical Design Rules

TABLE 2B.2
Design rules for a typical p-well CMOS process
(See Table 2B.3 in color plates for graphical interpretation)

| | Dimensions | |
|--|------------|--------------|
| | Microns | Scalable |
| 1. p-well (CIF Brown, Mask #1 ^a) | | |
| 1.1 Width | 5 | 4 λ |
| 1.2 Spacing (different potential) | 15 | 10 λ |
| 1.3 Spacing (same potential) | 9 | 6 λ |
| 2. Active (CIF Green, Mask #2) | | |
| 2.1 Width | 4 | 2 λ |
| 2.2 Spacing | 4 | 2 λ |
| 2.3 p ⁺ active in n-sub to p-well edge | 8 | 6 λ |
| 2.4 n ⁺ active in n-sub to p-well edge | 7 | 5 λ |
| 2.5 n ⁺ active in p-well to p-well edge | 4 | 2 λ |
| 2.6 p ⁺ active in p-well to p-well edge | 1 | λ |
| 3. Poly (POLY I) (CIF Red, Mask #3) | | |
| 3.1 Width | 3 | 2 λ |
| 3.2 Spacing | 3 | 2 λ |
| 3.3 Field poly to active | 2 | λ |
| 3.4 Poly overlap of active | 3 | 2 λ |
| 3.5 Active overlap of poly | 4 | 2 λ |
| 4. p ⁺ select (CIF Orange, Mask #4) | | |
| 4.1 Overlap of active | 2 | λ |
| 4.2 Space to n ⁺ active | 2 | λ |
| 4.3 Overlap of channel ^b | 3.5 | 2 λ |
| 4.4 Space to channel ^b | 3.5 | 2 λ |
| 4.5 Space to p ⁺ select | 3 | 2 λ |
| 4.6 Width | 3 | 2 λ |

Typical Design Rules (cont)

| | | | |
|------|--|----------------------|----------------------------|
| 5. | Contact ^c (CIF Purple, Mask #6) | | |
| 5.1 | Square contact, exactly | 3×3 | $2\lambda \times 2\lambda$ |
| 5.2 | Rectangular contact, exactly | 3×8 | $2\lambda \times 6\lambda$ |
| 5.3 | Space to different contact | 3 | 2λ |
| 5.4 | Poly overlap of contact | 2 | λ |
| 5.5 | Poly overlap in direction of metal 1 | 2.5 | 2λ |
| 5.6 | Space to channel | 3 | 2λ |
| 5.7 | Metal 1 overlap of contact | 2 | λ |
| 5.8 | Active overlap of contact | 2 | λ |
| 5.9 | p^+ select overlap of contact | 3 | 2λ |
| 5.10 | Subs./well shorting contact, exactly | 3×8 | $2\lambda \times 6\lambda$ |
| 6. | Metal 1 ^d (CIF Blue, Mask #7) | | |
| 6.1 | Width | 3 | 2λ |
| 6.2 | Spacing | 4 | 3λ |
| 6.3 | Maximum current density | $0.8 \text{ mA}/\mu$ | $0.8 \text{ mA}/\mu$ |


Typical Design Rules (cont)

| | | | |
|------|---|-----------|---------------|
| 7. | Via ^e (CIF Purple Hatched, Mask #C1) | | |
| 7.1 | Size, exactly | 3 × 3 | 2λ × 2λ |
| 7.2 | Separation | 3 | 2λ |
| 7.3 | Space to poly edge | 4 | 2λ |
| 7.4 | Space to contact | 3 | 2λ |
| 7.5 | Overlap by metal 1 | 2 | λ |
| 7.6 | Overlap by metal 2 | 2 | λ |
| 7.7 | Space to active edge | 3 | 2λ |
| 8. | Metal 2 (CIF Orange Hatched, Mask #C2) | | |
| 8.1 | Width | 5 | 3λ |
| 8.2 | Spacing | 5 | 3λ |
| 8.3 | Bonding pad size | 100 × 100 | 100 μ × 100 μ |
| 8.4 | Probe pad size | 75 × 75 | 75 μ × 75 μ |
| 8.5 | Bonding pad separation | 50 | 50 μ |
| 8.6 | Bonding to probe pad | 30 | 30 μ |
| 8.7 | Probe pad separation | 30 | 30 μ |
| 8.8 | Pad to circuitry | 40 | 40 μ |
| 8.9 | Maximum current density | 0.8 mA/μ | 0.8 mA/μ |
| 9. | Passivation ^f (CIF Purple Dashed, Mask #8) | | |
| 9.1 | Bonding pad opening | 90 × 90 | 90 μ × 90 μ |
| 9.2 | Probe pad opening | 65 × 65 | 65 μ × 65 μ |
| 10. | Metal 2 crossing coincident metal 1 and poly ^g | | |
| 10.1 | Metal 1 to poly edge spacing when crossing metal 2 | 2 | λ |
| 10.2 | Rule domain | 2 | λ |
| 11. | Electrode (POLY II) ^h (CIF Purple Hatched, Mask #A1) | | |
| 11.1 | Width | 3 | 2λ |
| 11.2 | Spacing | 3 | 2λ |
| 11.3 | POLY I overlap of POLY II | 2 | λ |
| 11.4 | Space to contact | 3 | 2λ |

Typical Design Rules (cont)

SCMOS Layout Rules - Poly

| Rule | Description | Lambda | | |
|-------|----------------------------------|--------|------|------|
| | | SCMOS | SUBM | DEEP |
| 3.1 | Minimum width | 2 | 2 | 2 |
| 3.2 | Minimum spacing over field | 2 | 3 | 3 |
| 3.2.a | Minimum spacing over active | 2 | 3 | 4 |
| 3.3 | Minimum gate extension of active | 2 | 2 | 2.5 |
| 3.4 | Minimum active extension of poly | 3 | 3 | 4 |
| 3.5 | Minimum field poly to active | 1 | 1 | 1 |

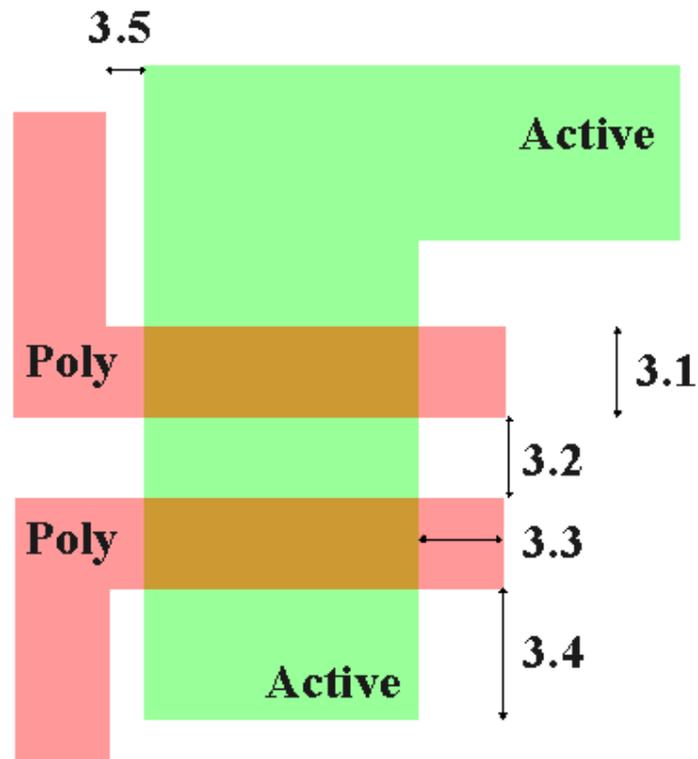

Typical Process Description

Process scenario of major process steps in typical p-well CMOS process^a

1. Clean wafer
2. GROW THIN OXIDE
3. Apply photoresist
4. PATTERN P-WELL (MASK #1)
5. Develop photoresist
6. Deposit and diffuse p-type impurities
7. Strip photoresist
8. Strip thin oxide
9. Grow thin oxide
10. Apply layer of Si_3N_4
11. Apply photoresist
12. PATTERN Si_3N_4 (active area definition) (MASK #2)
13. Develop photoresist
14. Etch Si_3N_4
15. Strip photoresist
Optional field threshold voltage adjust
 - A.1 Apply photoresist
 - A.2 PATTERN ANTIMOAT IN SUBSTRATE (MASK #A1)
 - A.3 Develop photoresist
 - A.4 FIELD IMPLANT (n-type)
 - A.5 Strip photoresist
16. GROW FIELD OXIDE
17. Strip Si_3N_4
18. Strip thin oxide
19. GROW GATE OXIDE
20. POLYSILICON DEPOSITION (POLY I)
21. Apply photoresist
22. PATTERN POLYSILICON (MASK #3)
23. Develop photoresist
24. ETCH POLYSILICON

Typical Process Description (cont)

25. Strip photoresist
Optional steps for double polysilicon process
 - B.1 Strip thin oxide
 - B.2 GROW THIN OXIDE
 - B.3 POLYSILICON DEPOSITION (POLY II)
 - B.4 Apply photoresist
 - B.5 PATTERN POLYSILICON (MASK #B1)
 - B.6 Develop photoresist
 - B.7 ETCH POLYSILICON
 - B.8 Strip photoresist
 - B.9 Strip thin oxide

26. Apply photoresist
27. PATTERN P-CHANNEL DRAINS AND SOURCES AND P⁺ GUARD RINGS (p-well ohmic contacts) (MASK #4)
28. Develop photoresist
29. p⁺ IMPLANT
30. Strip photoresist
31. Apply photoresist
32. PATTERN N-CHANNEL DRAINS AND SOURCES AND N⁺ GUARD RINGS (top ohmic contact to substrate) (MASK #5)
33. Develop photoresist
34. n⁺ IMPLANT
35. Strip photoresist
36. Strip thin oxide
37. Grow oxide
38. Apply photoresist
39. PATTERN CONTACT OPENINGS (MASK #6)
40. Develop photoresist
41. Etch oxide
42. Strip photoresist
43. APPLY METAL
44. Apply photoresist
45. PATTERN METAL (MASK #7)
46. Develop photoresist
47. Etch metal

Typical Process Description (cont)

- 48. Strip photoresist
 - Optional steps for double metal process*
 - C.1 Strip thin oxide
 - C.2 DEPOSIT INTERMETAL OXIDE
 - C.3 Apply photoresist
 - C.4 PATTERN VIAS (MASK #C1)
 - C.5 Develop photoresist
 - C.6 Etch oxide
 - C.7 Strip photoresist
 - C.8 APPLY METAL (Metal 2)
 - C.9 Apply photoresist
 - C.10 PATTERN METAL (MASK #C2)
 - C.11 Develop photoresist
 - C.12 Etch metal
 - C.13 Strip photoresist
- 49. APPLY PASSIVATION
- 50. Apply photoresist
- 51. PATTERN PAD OPENINGS (MASK #8)
- 52. Develop photoresist
- 53. Etch passivation
- 54. Strip photoresist
- 55. ASSEMBLE, PACKAGE AND TEST

Typical Model Parameters

Process parameters for a typical^a p-well CMOS process

| | Typical | Tolerance ^b | Units |
|---------------------------------------|---------|------------------------|---|
| Square law model parameters | | | |
| V_{T0} (threshold voltage) | | | |
| n-channel (V_{TN0}) | 0.75 | ± 0.25 | V |
| p-channel (V_{TP0}) | -0.75 | ± 0.25 | V |
| K' (conduction factor) | | | |
| n-channel | 24 | ± 6 | $\mu\text{A}/\text{V}^2$ |
| p-channel | 8 | ± 1.5 | $\mu\text{A}/\text{V}^2$ |
| γ (body effect) | | | |
| n-channel | 0.8 | ± 0.4 | $\text{V}^{1/2}$ |
| p-channel | 0.4 | ± 0.2 | $\text{V}^{1/2}$ |
| λ (channel length modulation) | | | |
| n-channel | 0.01 | $\pm 50\%$ | V^{-1} |
| p-channel | 0.02 | $\pm 50\%$ | V^{-1} |
| ϕ (surface potential) | | | |
| n- and p-channel | 0.6 | ± 0.1 | V |
| Process parameters | | | |
| μ (channel mobility) | | | |
| n-channel | 710 | | $\text{cm}^2/(\text{V} \cdot \text{s})$ |
| p-channel | 230 | | $\text{cm}^2/(\text{V} \cdot \text{s})$ |
| Doping^c | | | |
| n ⁺ active | 5 | ± 4 | $10^{18}/\text{cm}^3$ |
| p ⁺ active | 5 | ± 4 | $10^{17}/\text{cm}^3$ |
| p-well | 5 | ± 2 | $10^{16}/\text{cm}^3$ |
| n-substrate | 1 | ± 0.1 | $10^{16}/\text{cm}^3$ |

Typical Model Parameters (cont)

| Physical feature sizes | | | |
|---|-------|------------|-------|
| T_{OX} (gate oxide thickness) | 500 | ± 100 | Å |
| Total lateral diffusion | | | |
| n-channel | 0.45 | ± 0.15 | μ |
| p-channel | 0.6 | ± 0.3 | μ |
| Diffusion depth | | | |
| n ⁺ diffusion | 0.45 | ± 0.15 | μ |
| p ⁺ diffusion | 0.6 | ± 0.3 | μ |
| p-well | 3.0 | $\pm 30\%$ | μ |
| Insulating layer separation | | | |
| POLY I to POLY II | 800 | ± 100 | Å |
| Metal 1 to Substrate | 1.55 | ± 0.15 | μ |
| Metal 1 to Diffusion | 0.925 | ± 0.25 | μ |
| POLY I to Substrate (POLY I on field oxide) | 0.75 | ± 0.1 | μ |
| Metal 1 to POLY I | 0.87 | ± 0.7 | μ |
| Metal 2 to Substrate | 2.7 | ± 0.25 | μ |
| Metal 2 to Metal I | 1.2 | ± 0.1 | μ |
| Metal 2 to POLY I | 2.0 | ± 0.07 | μ |

Typical Model Parameters (cont)

| Capacitances ^d | | | |
|--|-------|-------------|------------------|
| C_{OX} (gate oxide capacitance, n- and p-channel) | 0.7 | ± 0.1 | fF/ μ^2 |
| POLY I to substrate, poly in field | 0.045 | ± 0.01 | fF/ μ^2 |
| POLY II to substrate, poly in field | 0.045 | ± 0.01 | fF/ μ^2 |
| Metal 1 to substrate, metal in field | 0.025 | ± 0.005 | fF/ μ^2 |
| Metal 2 to substrate, metal in field | 0.014 | ± 0.002 | fF/ μ^2 |
| POLY I to POLY II | 0.44 | ± 0.05 | fF/ μ^2 |
| POLY I to Metal 1 | 0.04 | ± 0.01 | fF/ μ^2 |
| POLY I to Metal 2 | 0.039 | ± 0.003 | fF/ μ^2 |
| Metal 1 to Metal 2 | 0.035 | ± 0.01 | fF/ μ^2 |
| Metal 1 to diffusion | 0.04 | ± 0.01 | fF/ μ^2 |
| Metal 2 to diffusion | 0.02 | ± 0.005 | fF/ μ^2 |
| n ⁺ diffusion to p-well (junction, bottom) | 0.33 | ± 0.17 | fF/ μ^2 |
| n ⁺ diffusion sidewall (junction, sidewall) | 2.6 | ± 0.6 | fF/ μ |
| p ⁺ diffusion to substrate (junction, bottom) | 0.38 | ± 0.12 | fF/ μ^2 |
| p ⁺ diffusion sidewall (junction, sidewall) | 3.5 | ± 2.0 | fF/ μ |
| p-well to substrate (junction, bottom) | 0.2 | ± 0.1 | fF/ μ^2 |
| p-well sidewall (junction, sidewall) | 1.6 | ± 1.0 | fF/ μ |
| Resistances | | | |
| Substrate | 25 | $\pm 20\%$ | Ω -cm |
| p-well | 5000 | ± 2500 | Ω/\square |
| n ⁺ diffusion | 35 | ± 25 | Ω/\square |
| p ⁺ diffusion | 80 | ± 55 | Ω/\square |
| Metal | 0.003 | $\pm 25\%$ | Ω/\square |
| Poly | 25 | $\pm 25\%$ | Ω/\square |
| Metal 1–Metal 2 via ($3 \mu \times 3 \mu$ contact) | <0.1 | | Ω |
| Metal 1 contact to POLY I ($3 \mu \times 3 \mu$ contact) | <10 | | Ω |
| Metal 1 contact to n ⁺ or p ⁺ diffusion ($3 \mu \times 3 \mu$ contact) | <5 | | Ω |

Typical Model Parameters (cont)

Breakdown voltages, leakage currents, migration currents and operating conditions

| | | |
|---|------|-----------------|
| Punchthrough voltages (Gate oxide, POLY I to POLY II) | >10 | V |
| Diffusion reverse breakdown voltage | >10 | V |
| p-well to substrate reverse breakdown voltage | >20 | V |
| Metal 1 in field threshold voltage | >10 | V |
| Metal 2 in field threshold voltage | >10 | V |
| Poly-field threshold voltage | >10 | V |
| Maximum operating voltage | 7.0 | V |
| n ⁺ diffusion to p-well leakage current | 0.25 | fA/ μ^2 |
| p ⁺ diffusion to substrate leakage current | 0.25 | fA/ μ^2 |
| p-well leakage current | 0.25 | fA/ μ^2 |
| Maximum metal current density | 0.8 | mA/ μ width |
| Maximum device operating temperature | 200 | °C |

Typical Model Parameters (cont)

Level 3 Model (n-ch and p-ch)

SPICE MOSFET model parameters of a typical p-well CMOS process (MOSIS^a)

| Parameter (Level 2 model) | n-channel | p-channel | Units |
|------------------------------|-----------|-----------|---|
| VTO | 0.827 | -0.895 | V |
| KP | 32.87 | 15.26 | $\mu\text{A}/\text{V}^2$ |
| GAMMA | 1.36 | 0.879 | $\text{V}^{1/2}$ |
| PHI | 0.6 | 0.6 | V |
| LAMBDA | 1.605E-2 | 4.709E-2 | V^{-1} |
| CGSO | 5.2E-4 | 4.0E-4 | fF/ μ width |
| CGDO | 5.2E-4 | 4.0E-4 | fF/ μ width |
| RSH | 25 | 95 | Ω/\square |
| CJ | 3.2E-4 | 2.0E-4 | $\rho \text{ fF}/\mu^2$ |
| MJ | 0.5 | 0.5 | |
| CJSW | 9.0E-4 | 4.5E-4 | $\rho \text{ fF}/\mu$ perimeter |
| MJSW | 0.33 | 0.33 | |
| TOX | 500 | 500 | Å |
| NSUB | 1.0E16 | 1.12E14 | $1/\text{cm}^3$ |
| NSS | 0 | 0 | $1/\text{cm}^2$ |
| NFS | 1.235E12 | 8.79E11 | $1/\text{cm}^2$ |
| TPG | 1 | -1 | |
| XJ | 0.4 | 0.4 | μ |
| LD | 0.28 | 0.28 | μ |
| UO | 200 | 100 | $\text{cm}^2/(\text{V} \cdot \text{s})$ |
| UCRIT | 9.99E5 | 1.64E4 | V/cm |
| UEXP | 1.001E-3 | 0.1534 | |
| VMAX | 1.0E5 | 1.0E5 | m/s |
| NEFF | 1.001E-2 | 1.001E-2 | |
| DELTA | 1.2405 | 1.938 | |

Typical Model Parameters (cont)

```
.MODEL CMOSN NMOS (  
+VERSION = 3.1  
+XJ      = 1.5E-7  
+K1      = 0.875093  
+K3B     = -8.5140476  
+DVTOW   = 0  
+DVTO    = 2.670658  
+UO      = 452.3081836  
+UC      = 1.166279E-11  
+AGS     = 0.1384489  
+KETA    = -3.615287E-3  
+RDSW    = 1.380341E3  
+WR      = 1  
+XL      = 1E-7  
+DWB     = 3.537786E-8  
+CIT     = 0  
+CDSCB   = 0  
+DSUB    = 0.076309  
+PDIBLC2 = 2.23243E-3  
+PSCBE1  = 6.619472E8  
+DELTA   = 0.01  
+PRT     = 0  
+KT1L    = 0  
+UB1     = -7.61E-18  
+WL      = 0  
+WWN     = 1  
+LLN     = 1  
+LWL     = 0  
+CGDO    = 2.34E-10  
+CJ      = 4.240724E-4  
+CJSW    = 3.007134E-10  
+CJSWG   = 1.64E-10  
+CF      = 0  
+PK2     = -0.0283027
```

BSIM 4 Model (n-ch)

```
TNOM      = 27  
NCH       = 1.7E17  
K2        = -0.0943223  
WO        = 1.01582E-8  
DVT1W    = 0  
DVT1     = 0.4282172  
UA        = 3.061716E-13  
VSAT     = 1.682414E5  
BO        = 2.579158E-6  
A1        = 1.054571E-6  
PRWG     = 0.0301426  
WINT     = 2.594349E-7  
XW       = 0  
VOFF     = 0  
CDSC     = 2.4E-4  
ETAO     = 2.332015E-3  
PCLM     = 2.6209353  
PDIBLCB  = -0.0436947  
PSCBE2   = 2.968801E-4  
RSH      = 80.9  
UTE      = -1.5  
KT2      = 0.022  
UC1      = -5.6E-11  
WLN      = 1  
WWL      = 0  
LW       = 0  
CAPMOD   = 2  
CGSO     = 2.34E-10  
PB       = 0.9148626  
PBSW     = 0.8  
PBSWG    = 0.8  
PVTHO    = 0.0526696  
WKETA    = -0.0191754  
LEVEL    = 49  
TOX      = 1.4E-8  
VTHO     = 0.6656437  
K3       = 25.0562441  
NLX      = 1E-9  
DVT2W    = 0  
DVT2     = -0.1373089  
UB       = 1.515137E-18  
AO       = 0.6297744  
B1       = 5E-6  
A2       = 0.3379035  
PRWB     = 0.0106493  
LINT     = 7.489566E-8  
DWG      = -9.471353E-9  
NFACTOR  = 1.0754804  
CDSCD    = 0  
ETAB     = -1.531255E-4  
PDIBLC1  = 1  
DROUT    = 1.0300278  
PVAG     = 9.970995E-3  
MOBMOD   = 1  
KT1      = -0.11  
UA1      = 4.31E-9  
AT       = 3.3E4  
WW       = 0  
LL       = 0  
LWN      = 1  
XPART    = 0.5  
CGBO     = 1E-9  
MJ       = 0.4416777  
MJSW    = 0.2025106  
MJSWG    = 0.2025106  
PRDSW    = 110.1539295  
LKETA    = 8.469064E-4
```

98 parameters in this BSIM Model !

Typical Model Parameters (cont)

BSIM 4 Model (p-ch)

```

.MODEL CMOSF PMOS (
+VERSION = 3.1          TNOM    = 27          LEVEL  = 49
+XJ      = 1.5E-7      NCH    = 1.7E17        TOX    = 1.4E-8
+K1      = 0.5600277   K2     = 9.302429E-3   VTH0   = -0.9633249
+K3B     = -1.0103515  WO     = 1.010628E-8   K3     = 7.2192028
+DVTOW   = 0          DVT1W  = 0           NLX    = 5.826683E-8
+DVTO   = 2.2199372   DVT1   = 0.5378964   DVT2W  = 0
+UO      = 220.5729225 UA     = 3.141811E-9   DVT2   = -0.1158128
+UC      = -5.76898E-11 VSAT   = 1.342779E5    UB     = 1.085892E-21
+AGS     = 0.157364   BO     = 9.735259E-7   AO     = 0.9333822
+KETA    = -2.42686E-3 A1     = 3.447019E-4   B1     = 5E-6
+RDSW    = 3E3        PRWG   = -0.0418484   A2     = 0.3701317
+WR      = 1          WINT   = 3.097872E-7   PRWB   = -0.0212357
+XL      = 1E-7       XW     = 0           LINT   = 1.040878E-7
+DWB     = 1.629532E-8 VOFF   = -0.0823738   DWG    = -1.983686E-8
+CIT     = 0          CDSC   = 2.4E-4       NFACTOR = 0.969384
+CDSCB   = 0         ETAO   = 0.4985496   CDSCD  = 0
+DSUB    = 1         PCLM   = 2.1142057   ETAB   = -0.0653358
+PDIBLC2 = 3.172604E-3 PDIBLCB = -0.0511673   PDIBLC1 = 0.0256688
+PSCBE1  = 1.851867E10 PSCBE2 = 1.697939E-9   DROUT  = 0.1695622
+DELTA   = 0.01      RSH    = 103.6       PVAG   = 0
+PRT     = 0         UTE    = -1.5       MOBMOD = 1
+KT1L    = 0         KT2    = 0.022      KT1    = -0.11
+UB1     = -7.61E-18 UC1     = -5.6E-11   UA1    = 4.31E-9
+WL      = 0         WLN    = 1          AT     = 3.3E4
+WWN     = 1         WWL    = 0         WW     = 0
+LLN     = 1         LWL    = 0         LL     = 0
+LWL     = 0         CAPMOD = 2         LWN    = 1
+CGDO    = 3.09E-10  CGSO   = 3.09E-10   XPART  = 0.5
+CJ      = 7.410008E-4 PB     = 0.9665307   CGBO   = 1E-9
+CJSW    = 2.487127E-10 PBSW   = 0.99        MJ     = 0.4978642
+CJSWG   = 6.4E-11  PBSWG  = 0.99        MJSW   = 0.3877813
+CF      = 0         PVTHO  = 5.98016E-3 MJSWG  = 0.3877813
+PK2     = 3.73981E-3 WKETA  = 2.870507E-3 PRDSW  = 14.8598424

```

*



Technology Files

- • **Design Rules**
- **Process Flow (Fabrication Technology)** (will discuss next)
- **Model Parameters** (will discuss in substantially more detail after device operation and more advanced models are introduced)

Design Rules

- Give minimum feature sizes, spacing, and other constraints that are acceptable in a process
- Very large number of devices can be reliably made with the design rules of a process
- Yield and performance unpredictable and often low if rules are violated
- Compatible with design rule checker in integrated toolsets


Design Rules and Layout – consider transistors

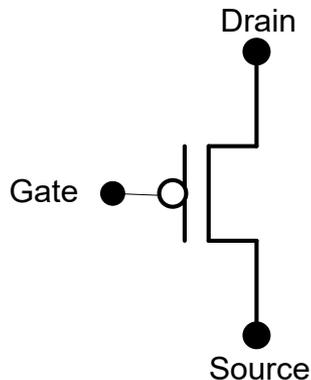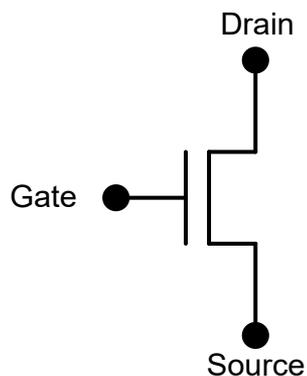


Layer Map

n-well bulk CMOS Process

- p-active
- n-active
- Poly 1
- Metal 1
- n-well
- contact

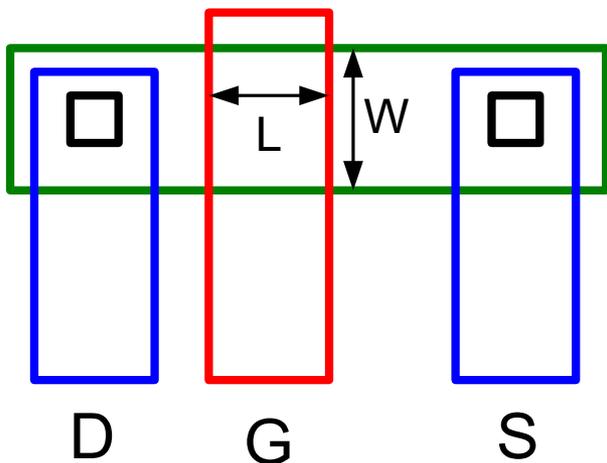



Layout

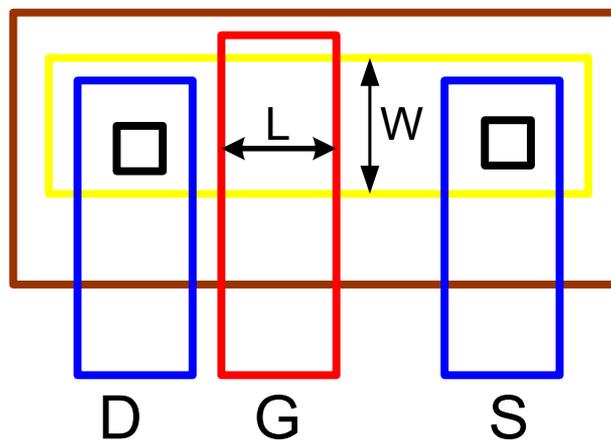

Layout



Layout always represented in a top view in two dimensions

Design Rules and Layout – consider transistors

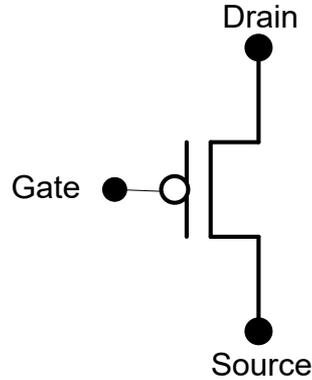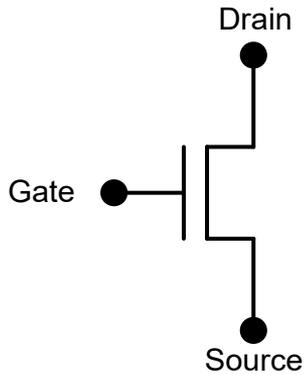


Layer Map

- p-active
- n-active
- Poly 1
- Metal 1
- n-well
- contact

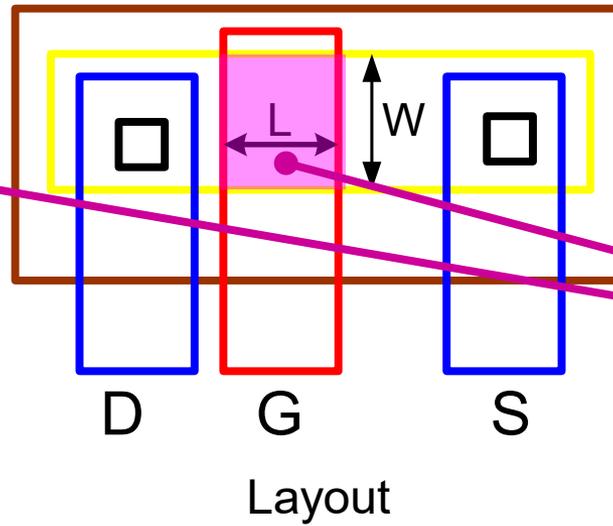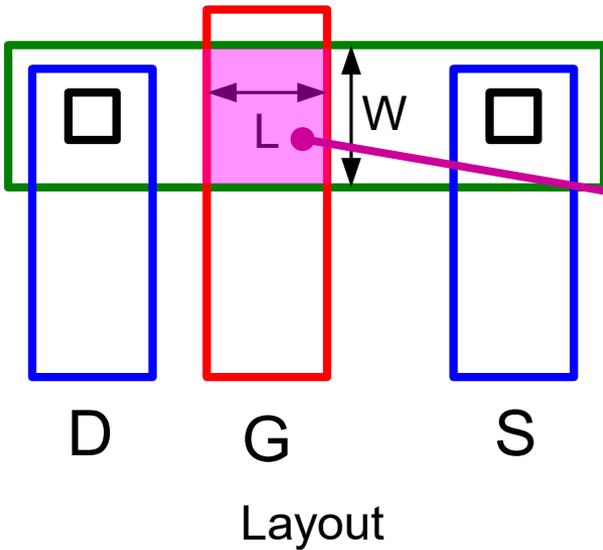

Everything useful in channel region. All other features just overhead that degrades performance

Design Rules


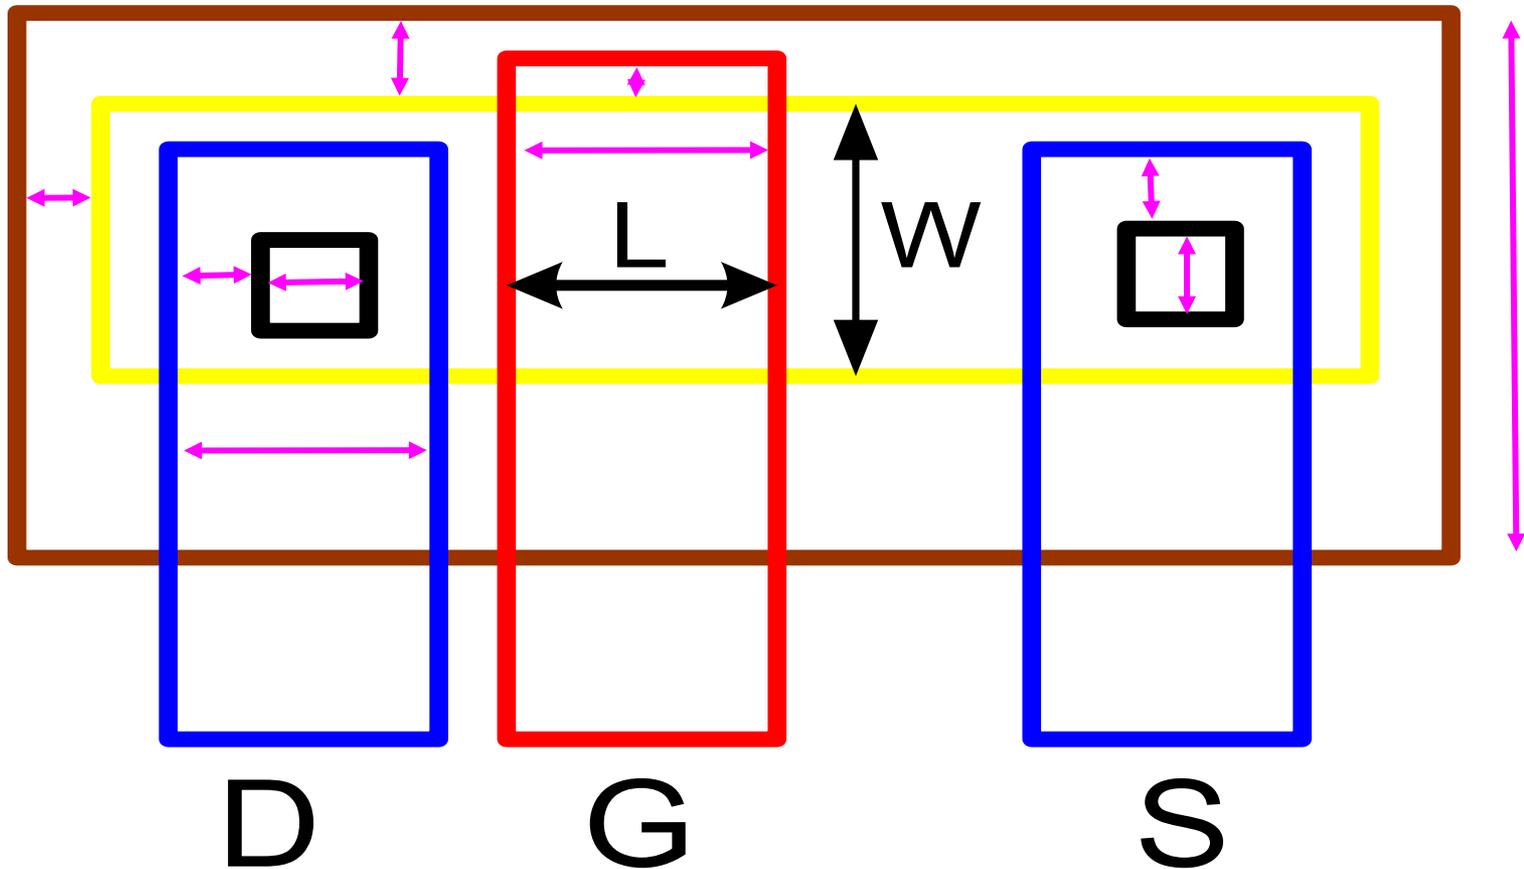


Design rules give minimum feature sizes and spacings



Designers generally do layouts to minimize size of circuit subject to design rule constraints (because yield, cost, and performance usually improve)

MOS Transistor

Qualitative Discussion of n-channel Operation

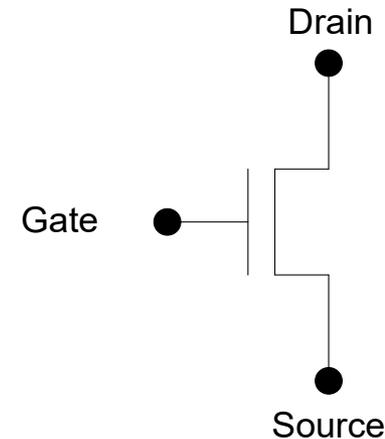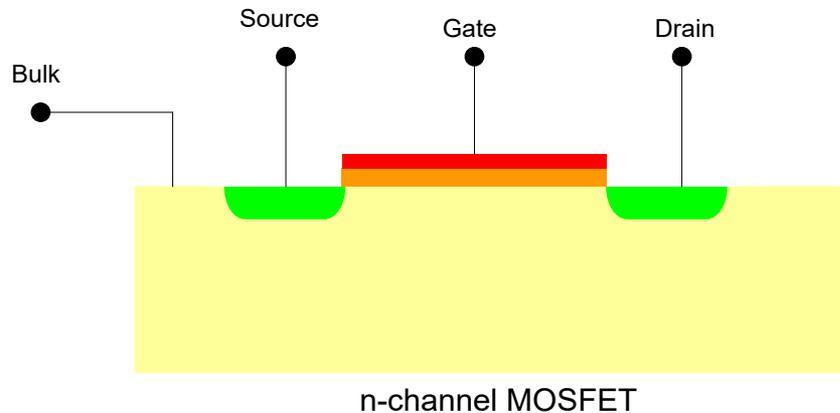

Equivalent Circuit for n-channel MOSFET



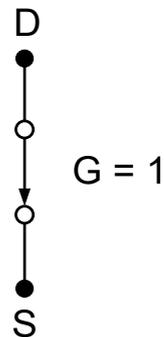
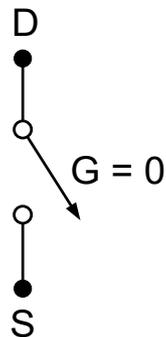


- Source assumed connected to (or close to) ground
- $V_{GS}=0$ denoted as Boolean gate voltage $G=0$
- $V_{GS}=V_{DD}$ denoted as Boolean gate voltage $G=1$
- Boolean G is relative to ground potential



This is the first model we have for the n-channel MOSFET !

Ideal switch-level model

MOS Transistor

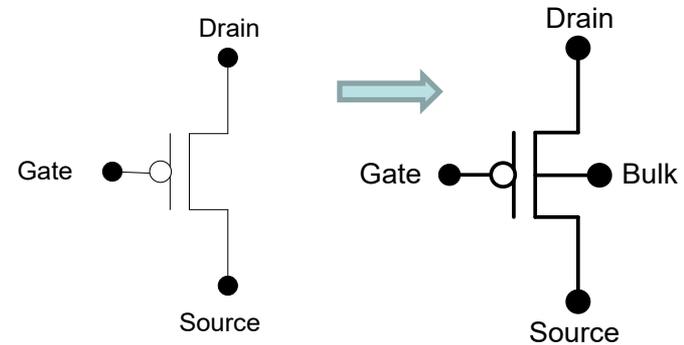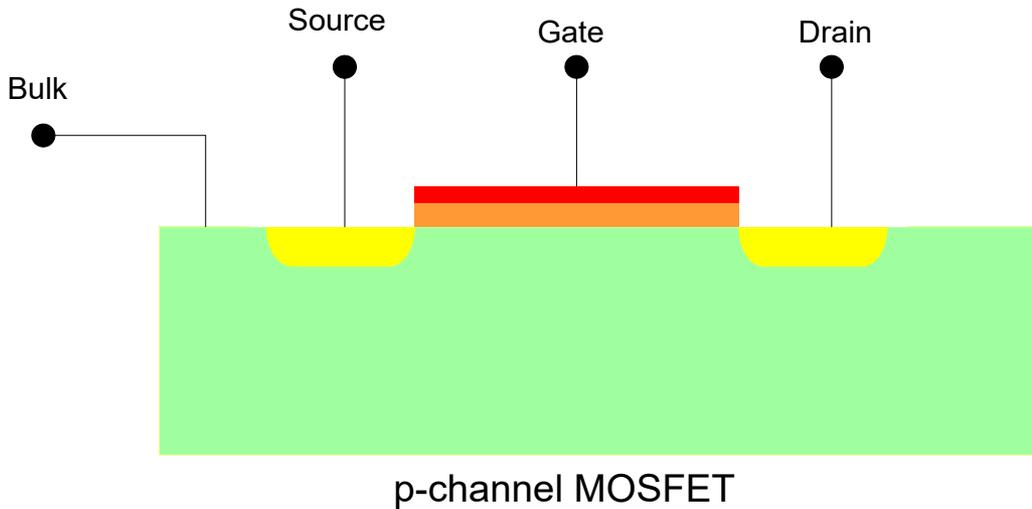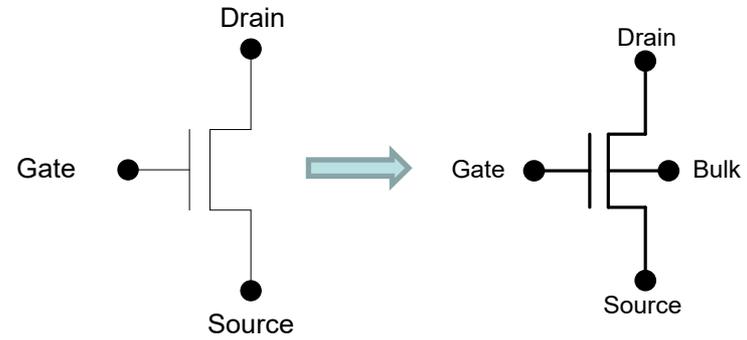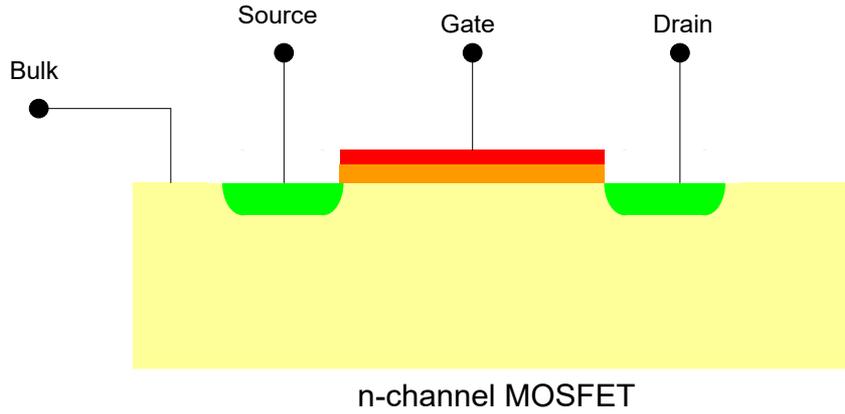

MOS Transistor Nomenclature

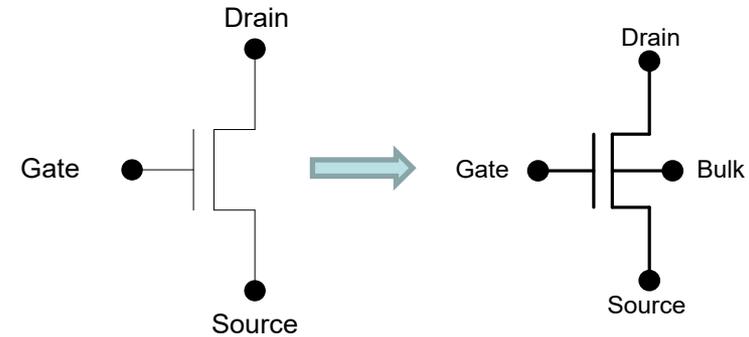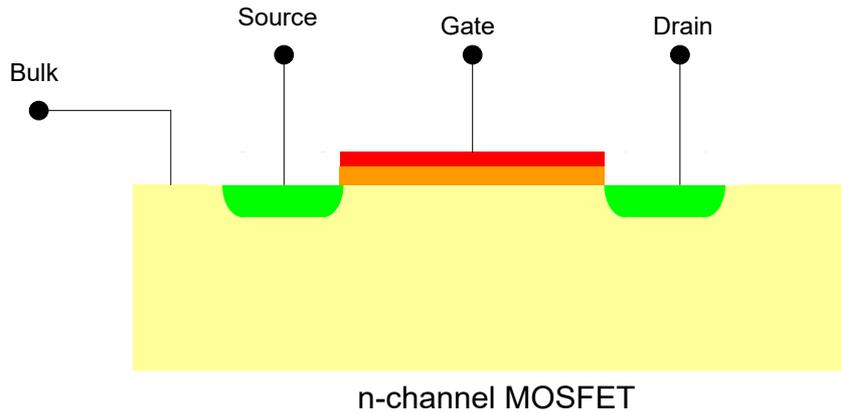





Metal Oxide Semiconductor




MOS

Early processes used metal for the gate, today metal is seldom used but the term MOS transistor is standard even though the gate is no longer metal

MOS Transistor in Bulk n-well CMOS Process

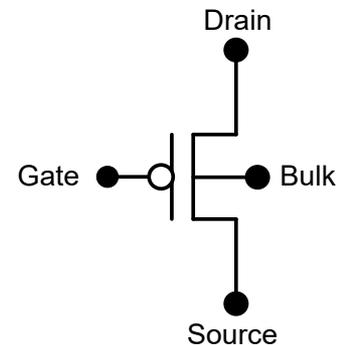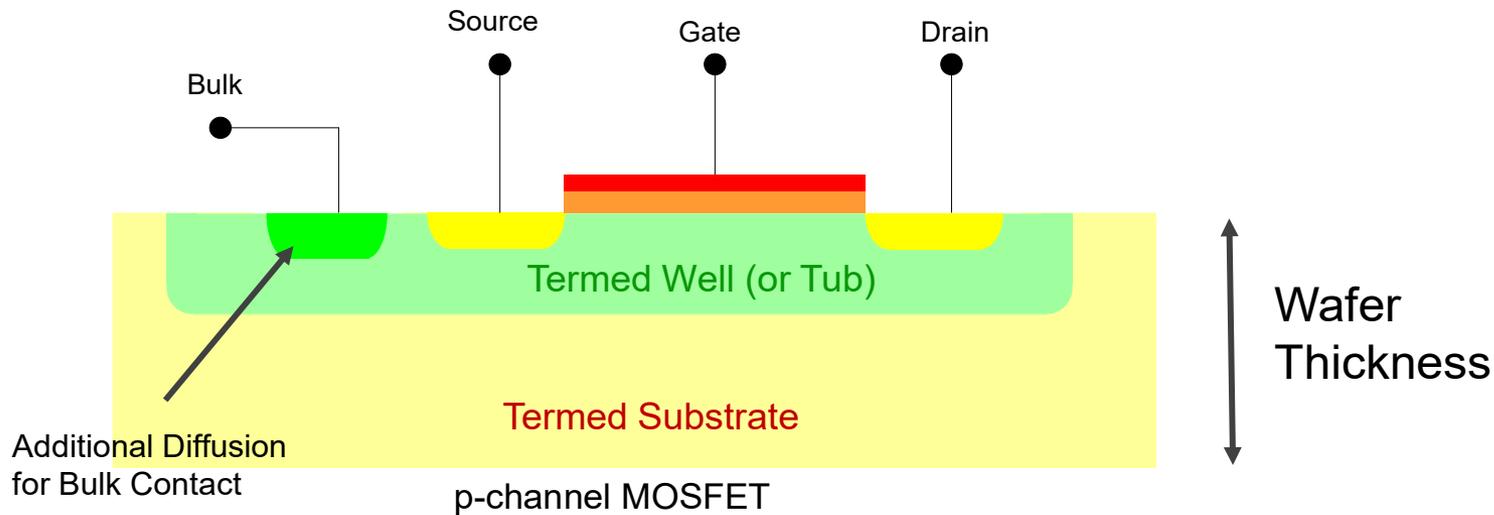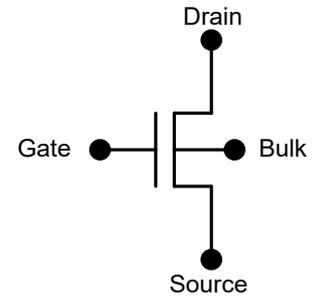
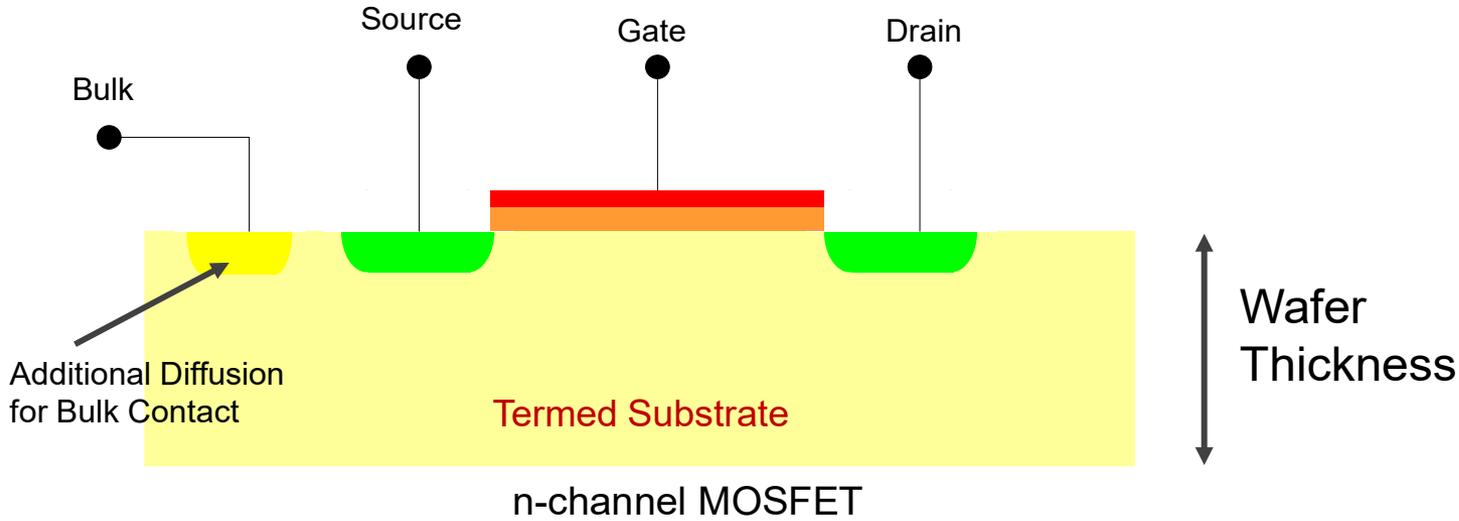


Design Rules and Layout – consider transistors

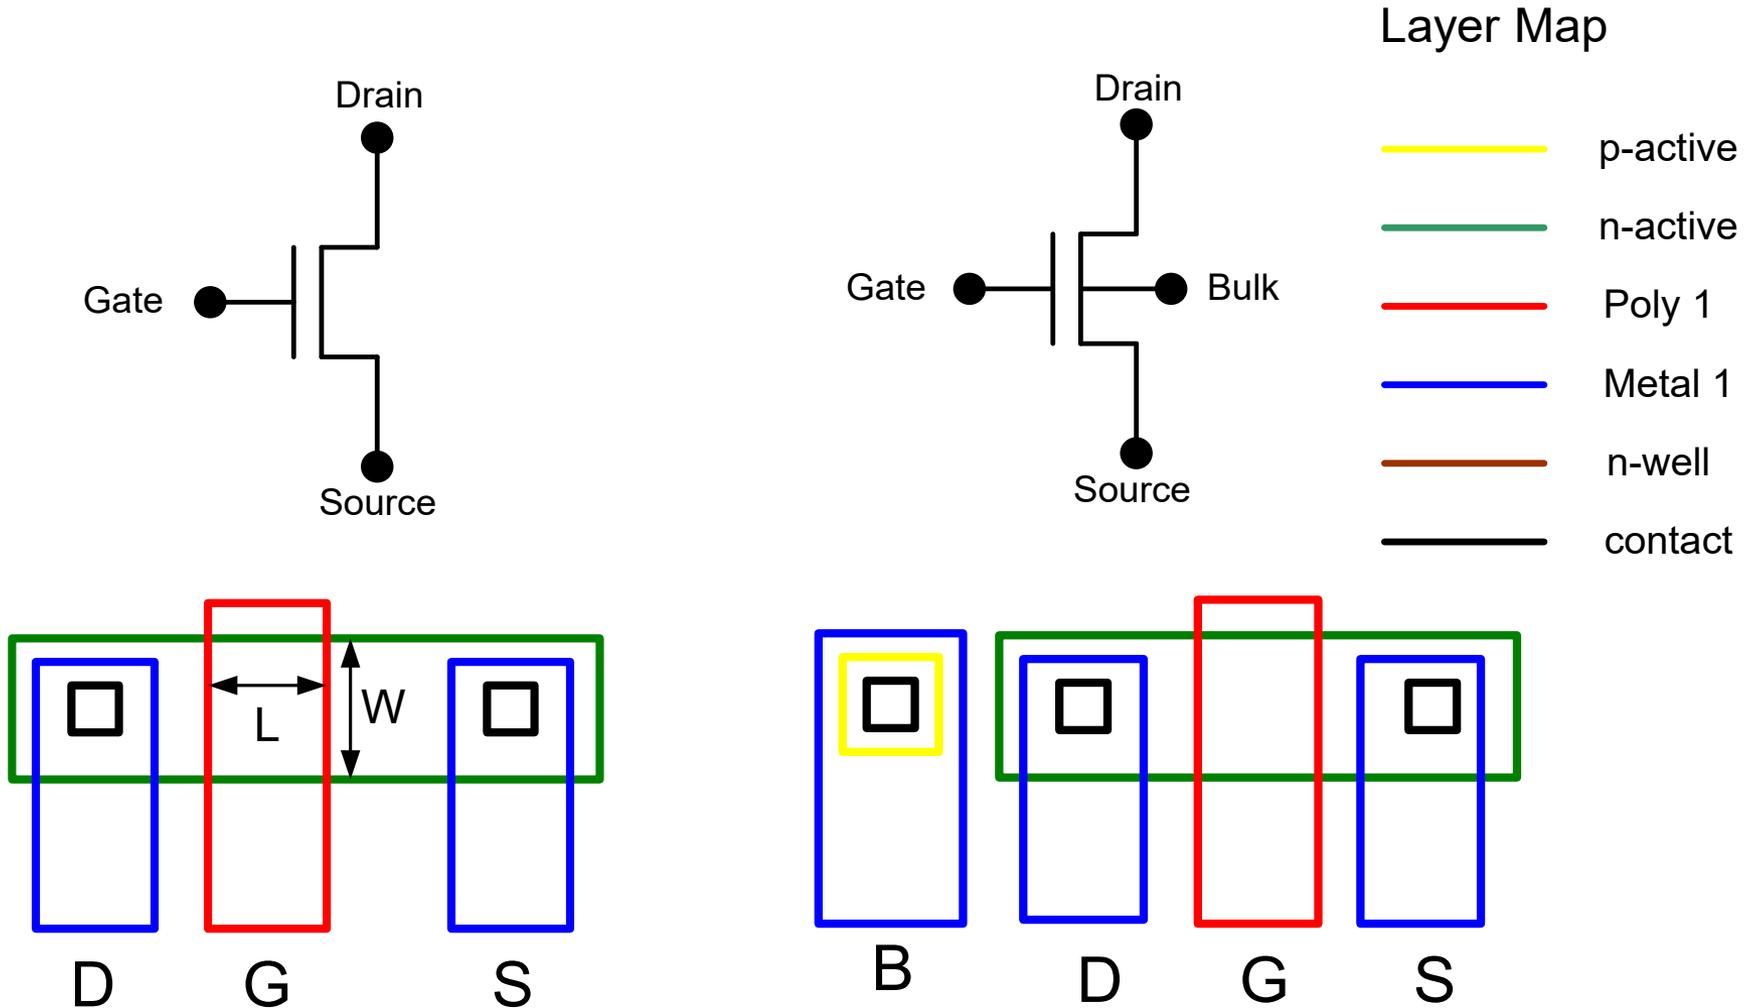



- Bulk connection needed
- Single bulk connection can often be used for several (many) transistors

Design Rules and Layout – consider transistors

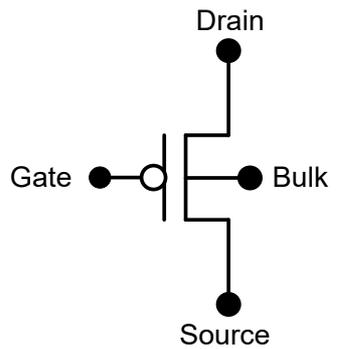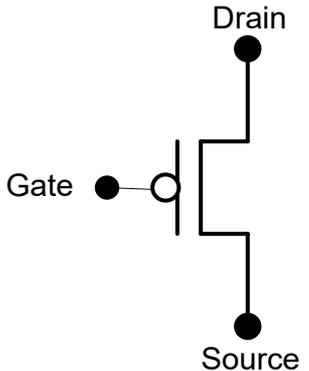


Layer Map

- p-active
- n-active
- Poly 1
- Metal 1
- n-well
- contact

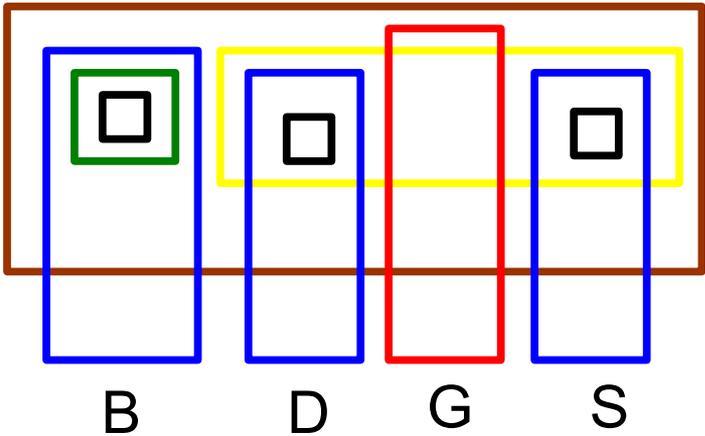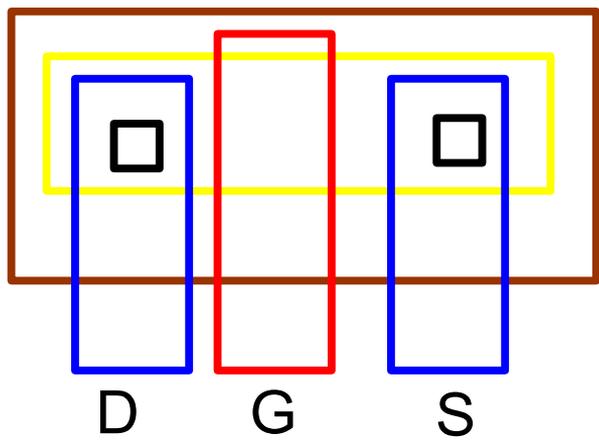


- Bulk connection needed
- Single bulk connection can often be used for several (many) transistors if they share the same well


Design Rules and Layout (example)



Logic Circuit


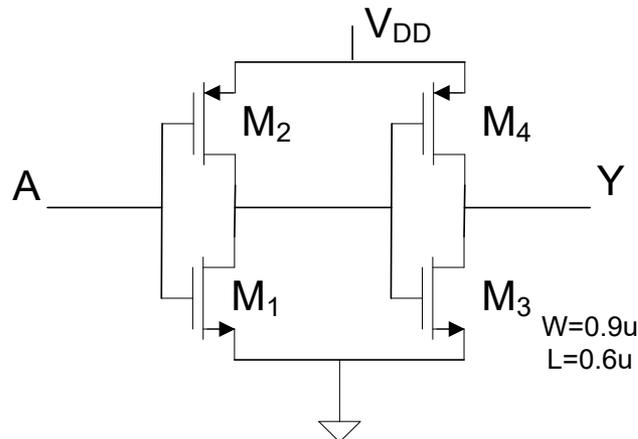


Circuit Schematic (Including Device Sizing)

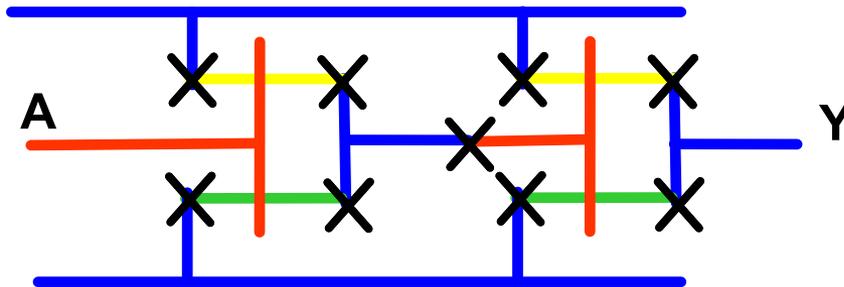

Stick Diagram


Design Rules (example)

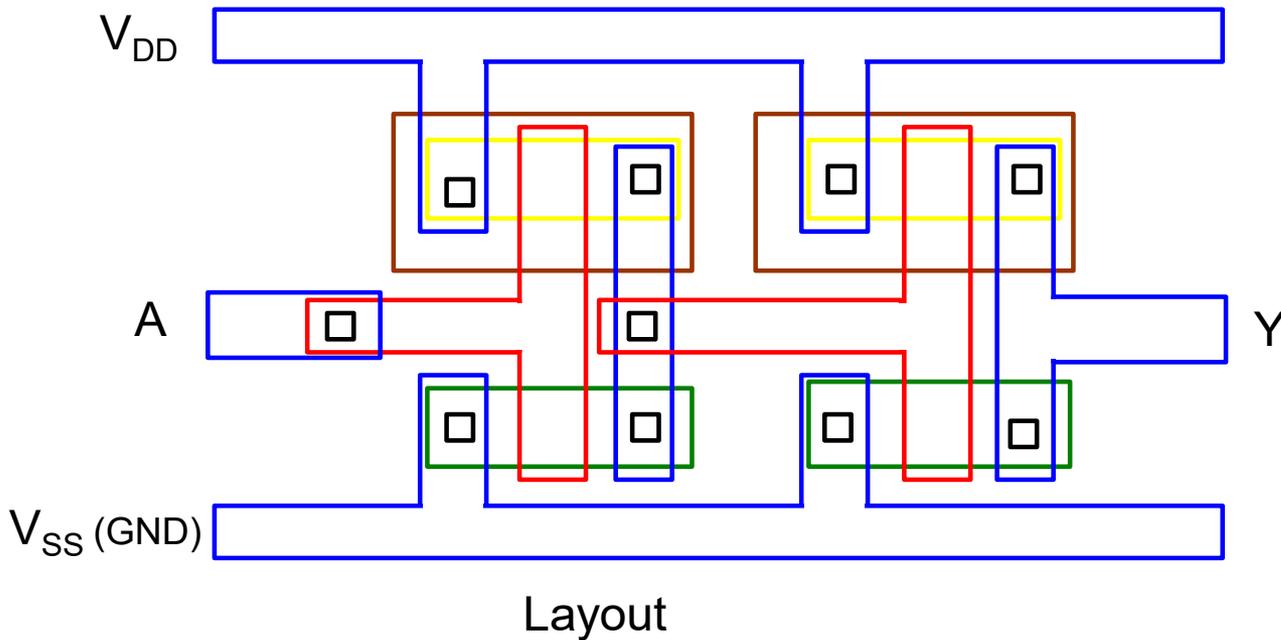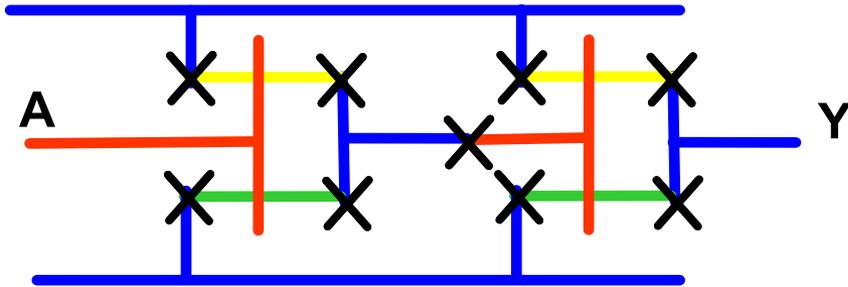

Layer Map


-  p-active
-  n-active
-  Poly 1
-  Metal 1
-  n-well
-  contact

Design Rules (example)

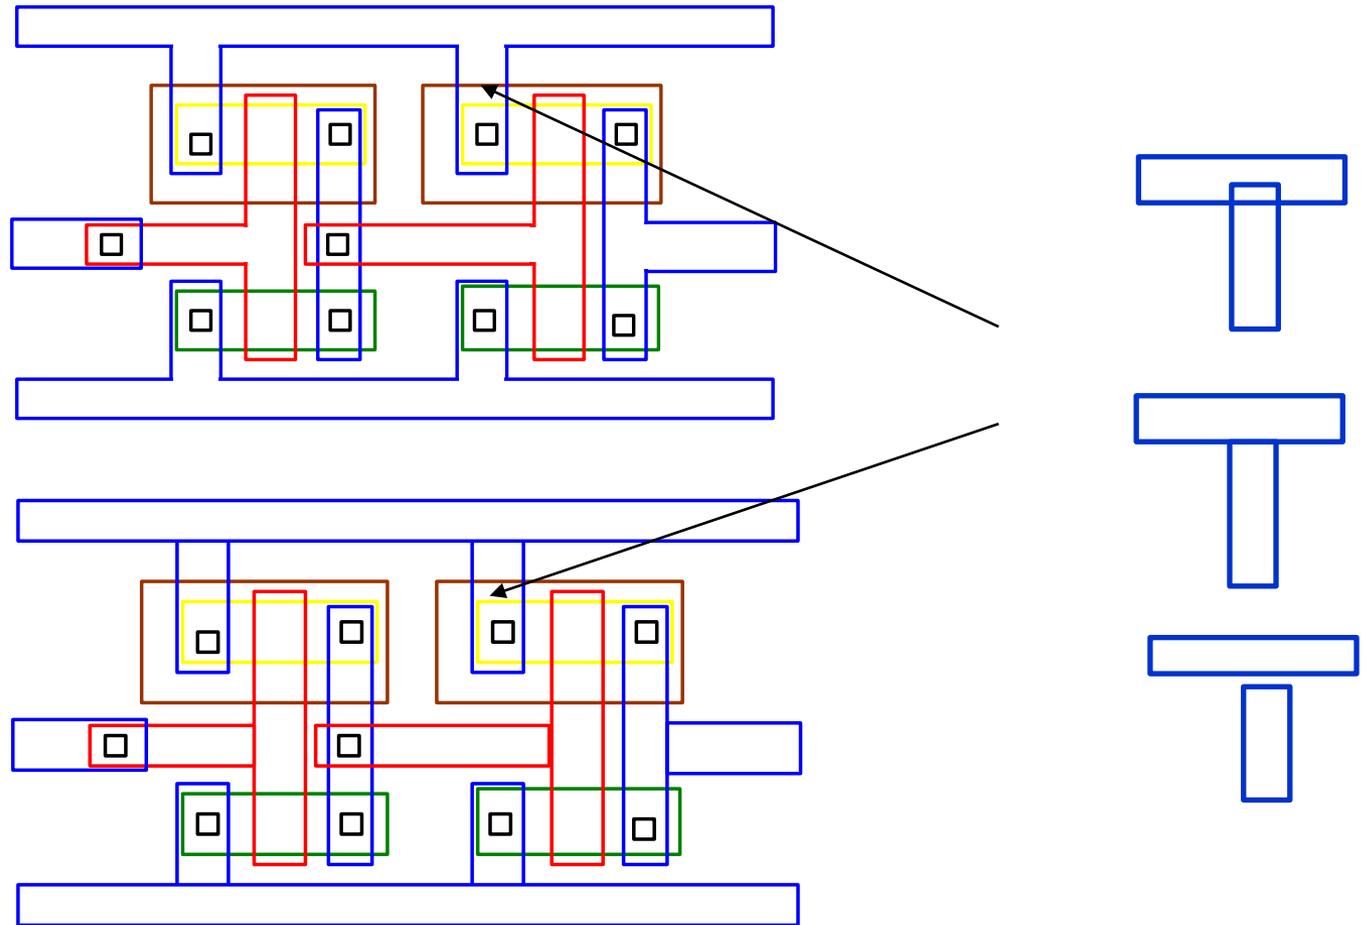


- Polygons in Geometric Description File (GDF) merged (when driving the pattern generator that makes the masks)
- Separate rectangles generally more convenient to represent
- Good practice to overlap rectangles to avoid break (though such an error would likely be caught with DRC)

Design Rules (example)

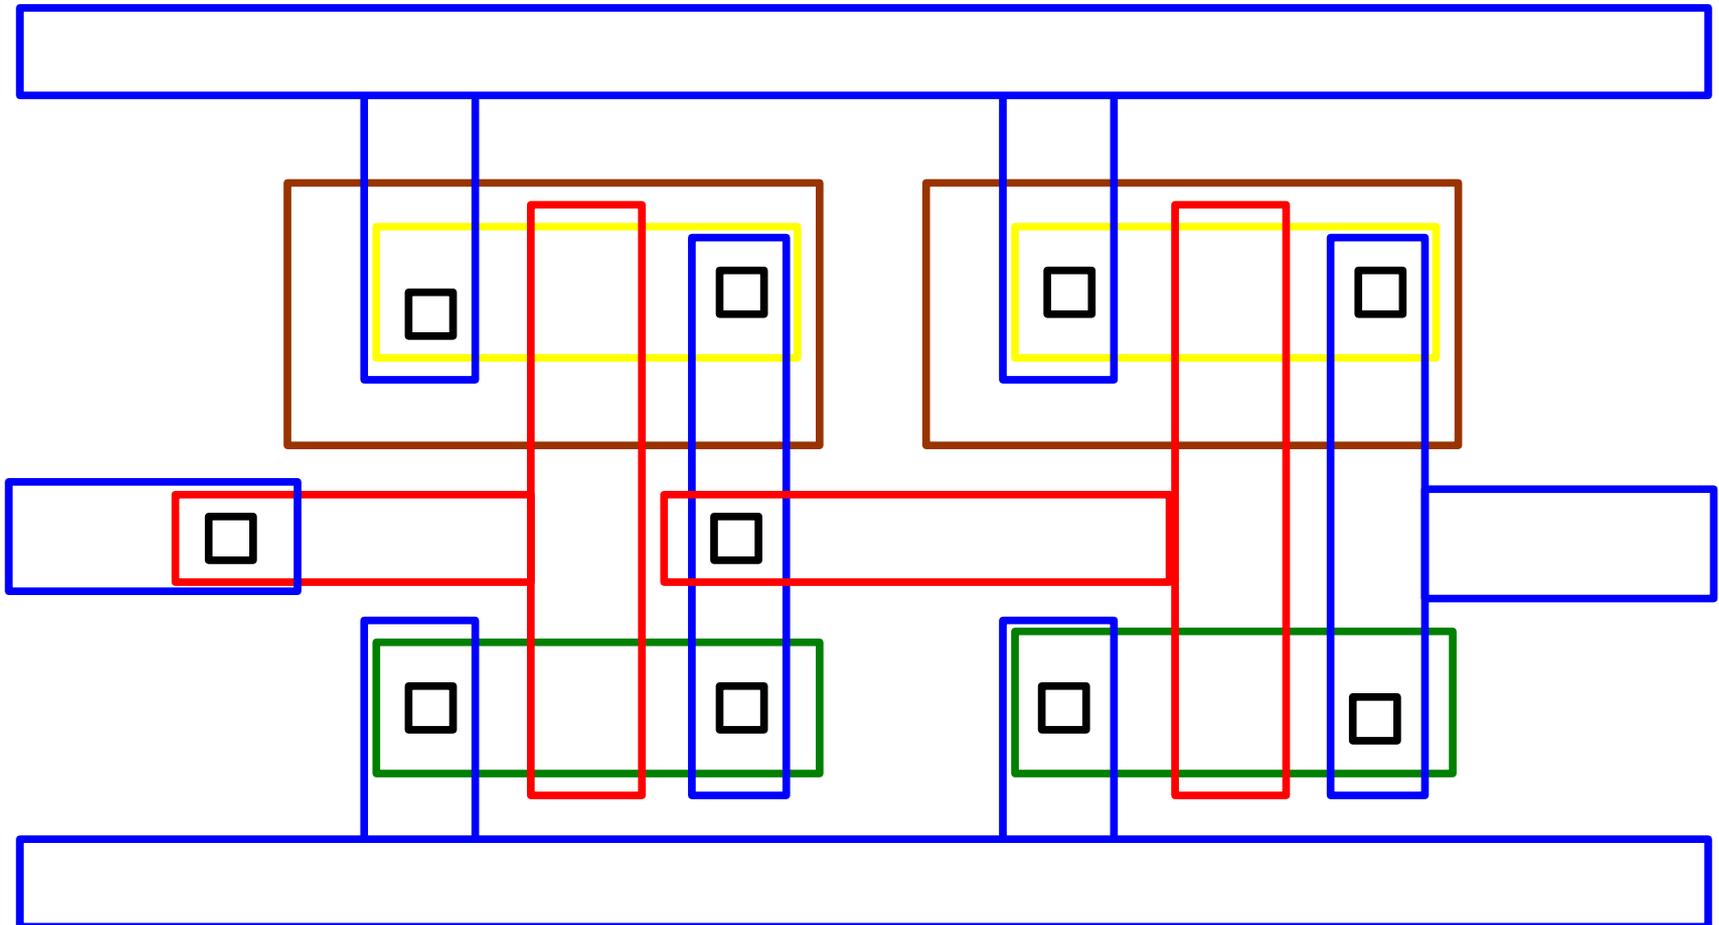




- Design rules must be satisfied throughout the design
- DRC runs incrementally during layout in most existing tools to flag most problems
- DRC can catch layout design rule errors but not circuit connection errors

Design Rules (example)

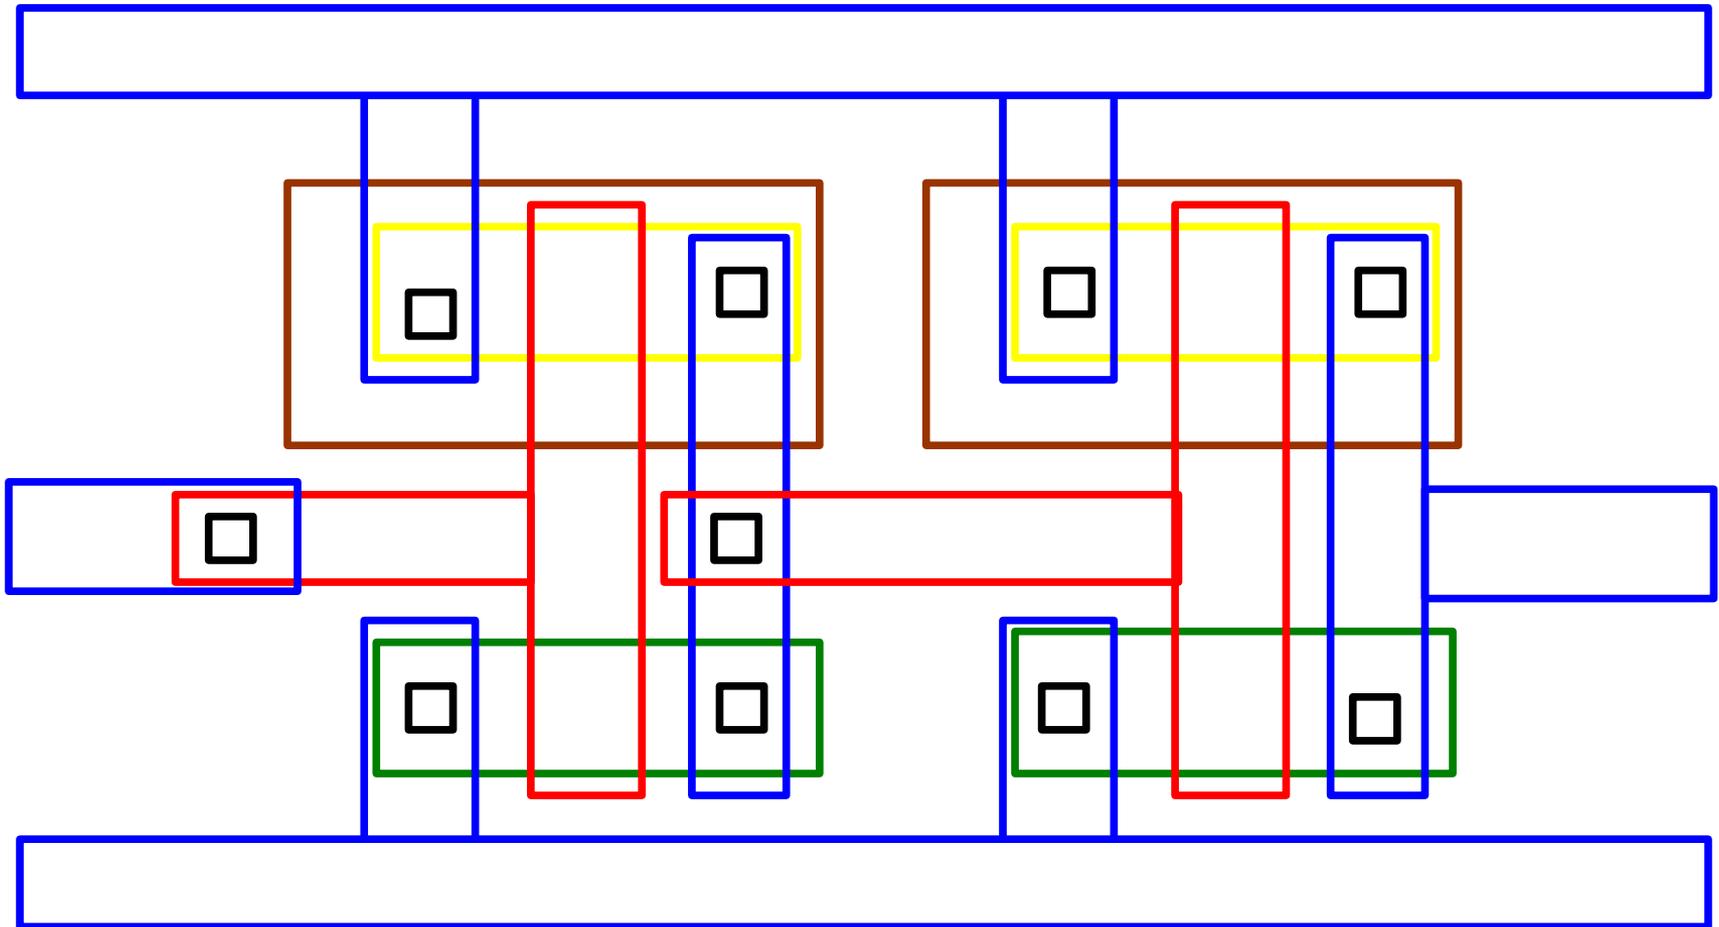


What is wrong with this layout ?
Bulk connections missing!

Design Rules (example)

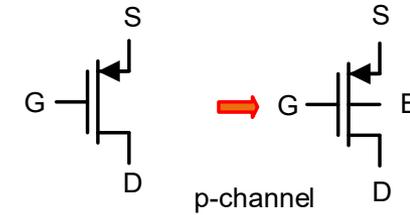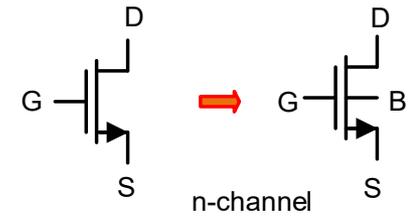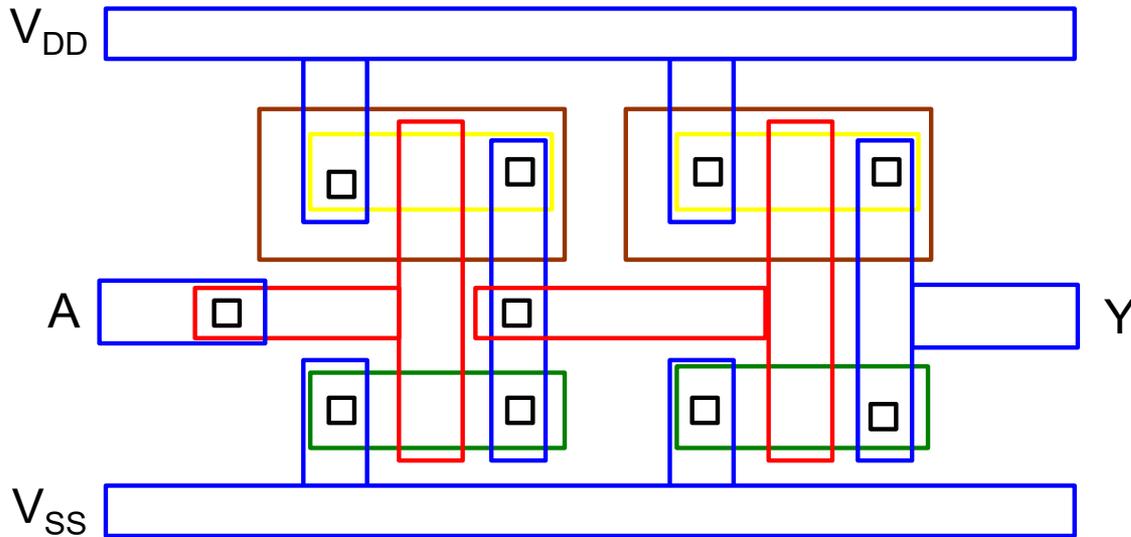


Actually 4-terminal device

- Note diffusions needed for bulk connections
- Note n-well connections increase area a significant amount
- Note n-wells are both connected to V_{DD} in this circuit

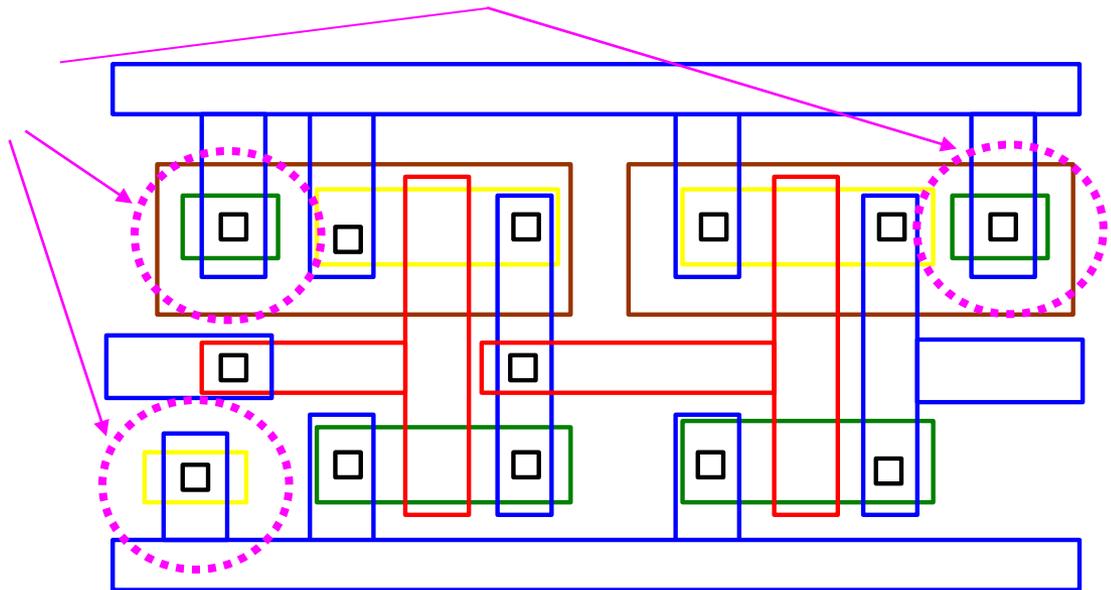


Design Rules (example)

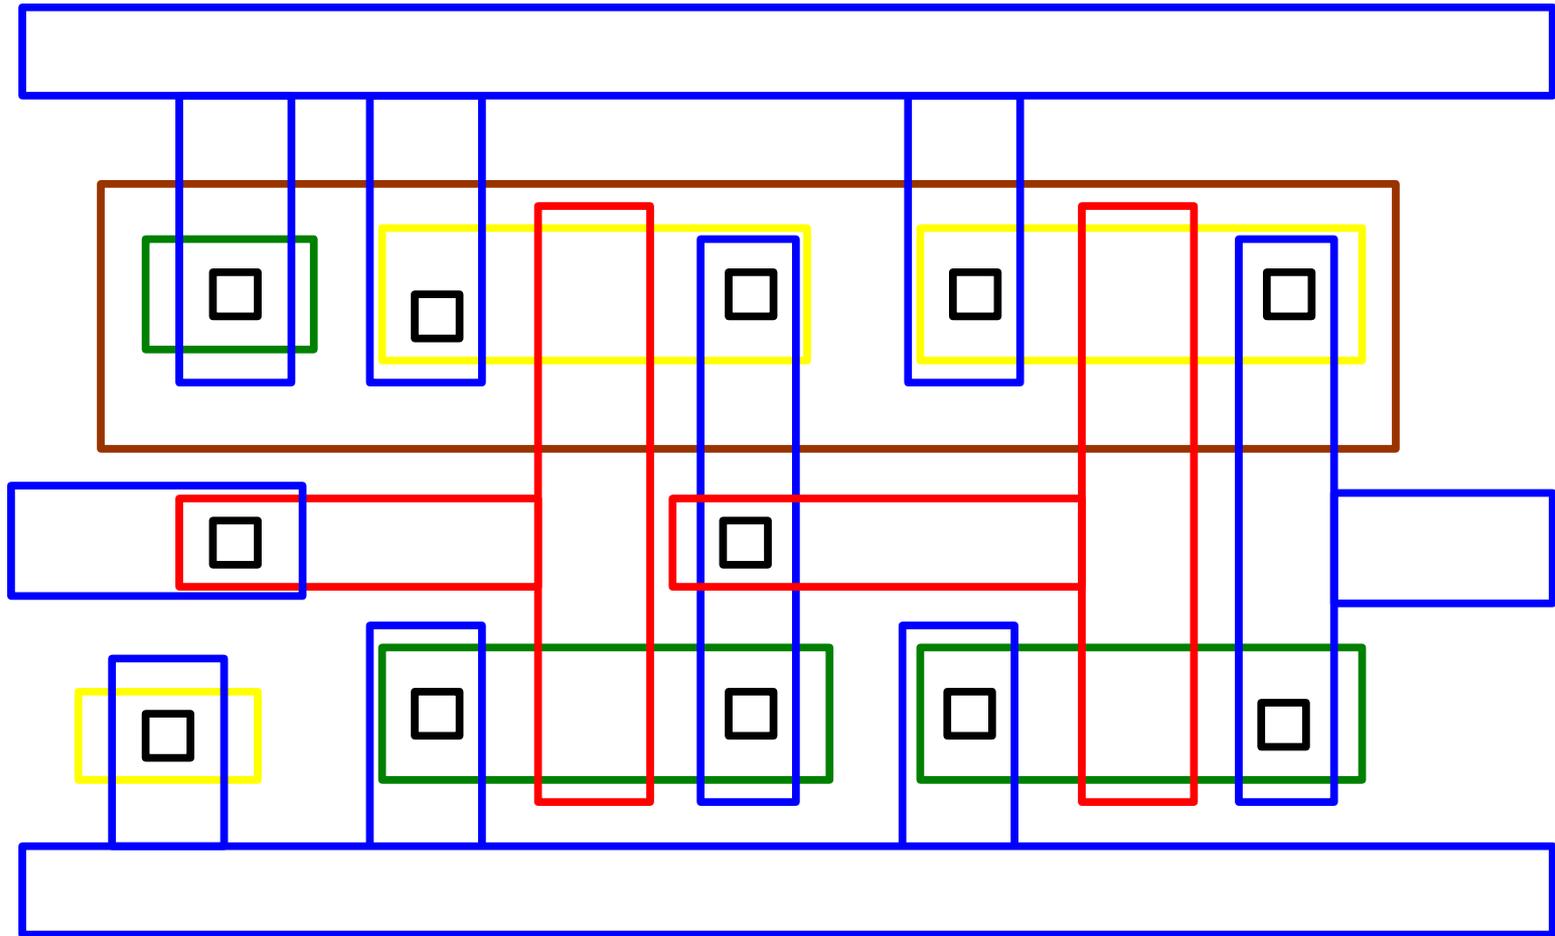

Layout with shared n-well reduces area

Design Rules (example)

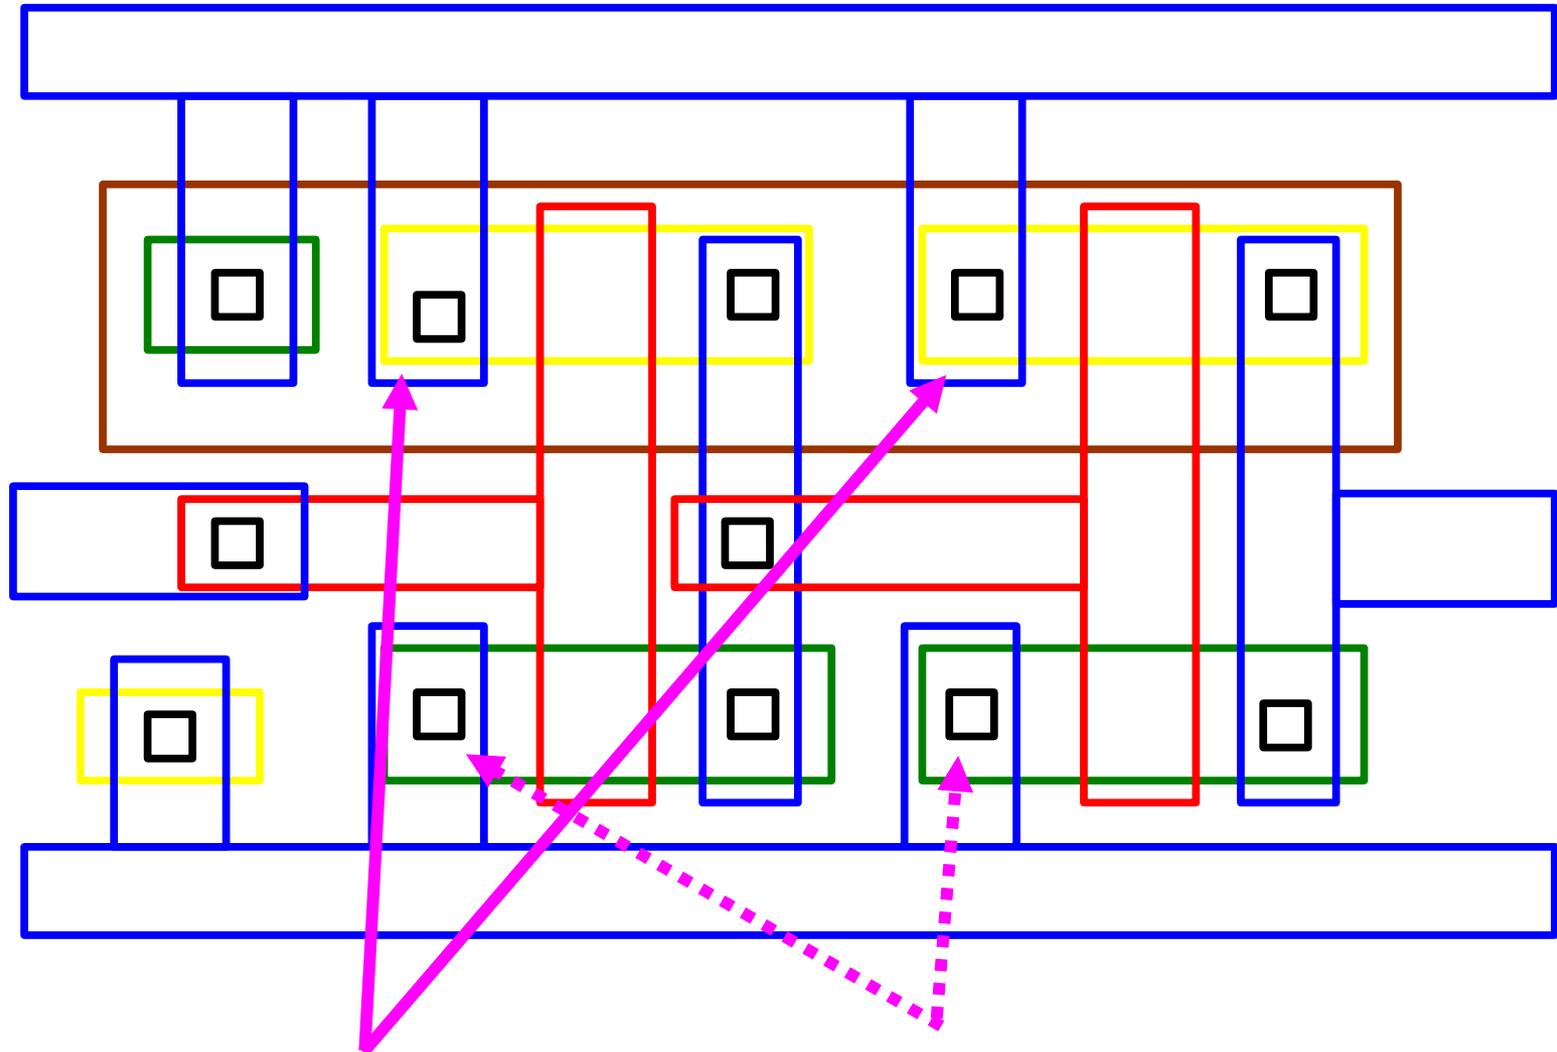

Shared p-active can be combined to reduce area

Shared n-active can be combined to reduce area

Design Rules

- Design rules can be given in absolute dimensions for every rule
- Design rules can be parameterized and given relative to a parameter
 - Makes movement from one process to another more convenient
 - Easier for designer to remember
 - Some penalty in area efficiency
 - Often termed λ -based design rules
 - Typically λ is $\frac{1}{2}$ the minimum feature size in a process

Design Rules

- See www.MOSIS.com for design rules
- Some of these files are on class WEB site
 - SCMOS Rules Updated Sept 2005.pdf
 - Mosis Rules Pictorial.pdf



The **MOSIS** Service

LOG IN


[About Us](#) [Events](#) [Products & Services](#) [Customers](#) [University Support Program](#)

*Under New Management, **MOSIS welcomes New Director.***

*MOSIS is pleased to announce a collaboration with the **Intel Custom Foundry**. MOSIS is committed to providing foundry access to key technologies for our customers. The primary Foundries which The MOSIS Service supports are TSMC, GlobalFoundries, Intel and On Semi. Please see the Intel collaboration **press release**.*

microelectronics fabrication

Production Solutions for IC Innovation

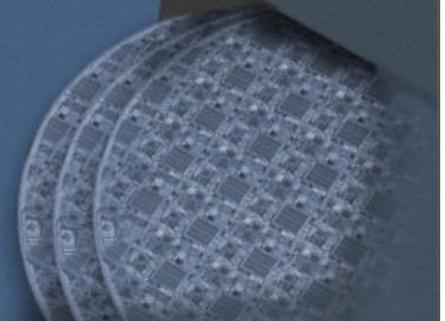

© 2019 The MOSIS Service, USC Information Sciences Institute [Home](#) [Contact Us](#) [Privacy Statement](#)

Updated Sept 13 2019



MOSIS Products & Services



Behind MOSIS is a service infrastructure equipped to deliver a full range of products to today's ambitious IC designers – worldwide.

Through our trusted partnerships with top foundries, customers can access cutting-edge technologies and manufacturing solutions that span all parts of the production cycle.

Our technical experts make the process simple, efficient and less time-intensive. From small to large-quantity fabrication runs, to packaging and assembly, our portfolio is optimized for flexibility and tailored to meet the unique production needs of our diverse customers.

PRODUCTS

Multi-Project Wafer (MPW) Runs

This "shared mask" model combines on one mask set designs from multiple customers or diverse designs from a single company.

Dedicated Runs

Dedicated (COT, or Customer Owned Tooling) runs through MOSIS are also available. Dedicated runs can be scheduled to start at any time.

Prices and Quotes

Costs for fabrication, packaging and assembly services are available online.

FABRICATION PROCESSES

GlobalFoundries featured processes:

CMOS: 12 nm, 22 FD_X, 45 RF_{SOI}, 55 nm, 9HP (90 nm), 9WG (90 nm), 8HP (0.13 μm), 8XP (0.13 μm), 7WL (0.18 μm) and 7SW (0.18 μm).

TSMC featured processes:

28 nm, 40 nm, 65 nm and 180 nm.

ON Semi featured CMOS processes

C5 (0.5 μm) CMOS





B5 Process

ON Semiconductor (formerly AMIS) 0.50 Micron



Process Family Description

This non-silicided CMOS process has 3 metal layers and 2 poly layers, and a high resistance layer. Stacked contacts are supported. The process is for 5 volt applications. MOSIS orders EPI wafers for this process. Non-EPI (bulk) is an additional cost option and not available for MEP submissions. For further information, see the [ON Semiconductor Foundry Mixed-Signal Offerings](#) web page.

B5N Process

PIP (poly2 over poly) capacitors ($950 \text{ aF}/\mu\text{m}^2$) and the HRP (High Resistance) option are available on multiproject runs.

B5F Process

The B5F process offers the above layers of C5N plus Thick_Gate, N_Minus_Implant (Npblk), and P_Minus_Implant (Ppblk).

Design Rules

This process supports the following design rules.

| Design Rules | Lambda ¹ | Feature Size ¹ | Availability |
|---------------------|---------------------|---------------------------|-------------------------|
| ON Semi B5F/N Rules | n/a | 0.60 | MOSIS, ON Semiconductor |
| SCMOS_SUBM | 0.30 | 0.60 | MOSIS in PDF |
| SCMOS | 0.35 | 0.60 (after sizing) | MOSIS in PDF |

¹Values in micrometers (μm)

Review the [CMP and antenna guidelines](#) which apply to both sets of design rules. MOSIS Technology Codes See [Technology Codes for ON Semiconductor B5F/N Process](#).

This will take you to a 54 page pdf file that can be downloaded

Examples in slides

Table 2a: MOSIS SCMOS-Compatible Mappings

| Foundry | Process | Lambda (micro- meters) | Options |
|---------|---|------------------------|------------------------------|
| ON Semi | C5F/N (0.5 micron <i>n</i> -well) | 0.35 | <u>SCN3M</u> , <u>SCN3ME</u> |
| TSMC | 0.35 micron 2P4M (4 Metal Polycided, 3.3 V/5 V) | 0.25 | <u>SCN4ME</u> |
| TSMC | 0.35 micron 1P4M (4 Metal Silicided, 3.3 V/5 V) | 0.25 | <u>SCN4M</u> |

Table 2b: MOSIS SCMOS_SUBM-Compatible Mappings

| Foundry | Process | Lambda (micro- meters) | Options |
|---------|---|------------------------|--|
| ON Semi | C5F/N (0.5 micron <i>n</i> -well) | 0.30 | <u>SCN3M SUBM</u> , <u>SCN3ME SUBM</u> |
| TSMC | 0.35 micron 2P4M (4 Metal Polycided, 3.3 V/5 V) | 0.20 | <u>SCN4ME SUBM</u> |
| TSMC | 0.35 micron 1P4M (4 Metal Silicided, 3.3 V/5 V) | 0.20 | <u>SCN4M SUBM</u> |
| TSMC | 0.25 micron 5 Metal 1 Poly (2.5 V/3.3 V) | 0.15 | <u>SCN5M SUBM</u> |
| TSMC | 0.18 micron 6 Metal 1 Poly (1.8 V/3.3 V) | 0.10 | <u>SCN6M SUBM</u> |

Table 2c: MOSIS SCMOS_DEEP-Compatible Mappings

| Foundry | Process | Lambda (micro- meters) | Options |
|---------|--|------------------------|-------------------|
| TSMC | 0.25 micron 5 Metal 1 Poly (2.5 V/3.3 V) | 0.12 | <u>SCN5M DEEP</u> |
| TSMC | 0.18 micron 6 Metal 1 Poly (1.8 V/3.3 V) | 0.09 | <u>SCN6M DEEP</u> |

Our labs and class projects

2.1. Well Type

The Scalable CMOS (SC) rules support both n -well and p -well processes. MOSIS recognizes three base technology codes that let the designer specify the well type of the process selected. SCN specifies an n -well process, SCP specifies a p -well process, and SCE indicates that the designer is willing to utilize a process of either n -well or p -well.

An SCE design must provide both a drawn n -well and a drawn p -well; MOSIS will use the well that corresponds to the selected process and ignore the other well. As a convenience, SCN and SCP designs may also include the other well (p -well in an SCN design or n -well in an SCP design), but it will always be ignored.

MOSIS currently offers only n -well processes or foundry-designated twin-well processes that from the design and process flow standpoints are equivalent to n -well processes. These twin-well processes may have options (deep n -well) that provide independently isolated p -wells. For all of these processes at this time use the technology code SCN. SCP is currently not supported, and SCE is treated exactly as SCN.

2.2. SCMOS Options

SCMOS options are used to designate projects that use additional layers beyond the standard single-poly, double metal CMOS. Each option is called out with a designator that is appended to the basic technology-code. Please note that not all possible combinations are available. The current list is shown in Table 1.

MOSIS has not issued SCMOS design rules for some vendor-supported options. For example, any designer using the SCMOS rules who wants the TSMC Thick_Top_Metal must draw the top metal to comply with the TSMC rules for that layer. Questions about other non-SCMOS layers should be directed to support@mosis.com.

Table 1: SCMOS Technology Options

| Designation | Long Form | Description |
|-------------|------------------|---|
| E | Electrode | Adds a second polysilicon layer (poly2) that can serve either as the upper electrode of a poly capacitor or (1.5 micron only) as a gate for transistors |
| A | Analog | Adds electrode (as in E option), plus layers for vertical NPN transistor pbase |
| 3M | 3 Metal | Adds second via (via2) and third metal (metal3) layers |
| 4M | 4 Metal | Adds 3M plus third via (via3) and fourth metal (metal4) layers |
| 5M | 5 Metal | Adds 4M plus fourth via (via4) and fifth metal (metal5) layers |
| 6M | 6 Metal | Adds 5M plus fifth via (via5) and sixth metal (metal6) layers |
| LC | Linear Capacitor | Adds a cap_well layer for linear capacitors |
| PC | Poly Cap | Adds poly_cap, a different layer for linear capacitors |
| SUBM | Sub-Micron | Uses revised layout rules for better fit to sub-micron processes (see section 2.4) |
| DEEP | Deep | Uses revised layout rules for better fit to deep sub-micron processes (see section 2.4) |

Table 5: Technology-code Map

| Technology code with link to layer map | Layers |
|--|--|
| <u>SCNE</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNA</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Pbase</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNPC</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly_cap</u> , <u>Poly</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCN3M</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block (Agilent/HP only)</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |
| → <u>SCN3ME</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |

Table 5: Technology-code Map

| Technology code with link to layer map | Layers |
|--|--|
| <u>SCNE</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNA</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Pbase</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNPC</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly_cap</u> , <u>Poly</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCN3M</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block (Agilent/HP only)</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |
| → <u>SCN3ME</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |

SCMOS Layout Rules - Well

| Rule | Description | Lambda | | |
|------|---|----------------|-----------------|------|
| | | SCMOS | SUBM | DEEP |
| 1.1 | Minimum width | 10 | 12 | 12 |
| 1.2 | Minimum spacing between wells at different potential | 9 ¹ | 18 ² | 18 |
| 1.3 | Minimum spacing between wells at same potential | 6 ³ | 6 ⁴ | 6 |
| 1.4 | Minimum spacing between wells of different type (if both are drawn) | 0 | 0 | 0 |

Exceptions for AMIS C30 0.35 micron process:

¹ Use lambda=16 for rule 1.2 only when using SCN4M or SCN4ME

² Use lambda=21 for rule 1.2 only when using SCN4M_SUBM or SCN4ME_SUBM

³ Use lambda=8 for rule 1.3 only when using SCN4M or SCN4ME

⁴ Use lambda=11 for rule 1.3 only when using SCN4M_SUBM or SCN4ME_SUBM

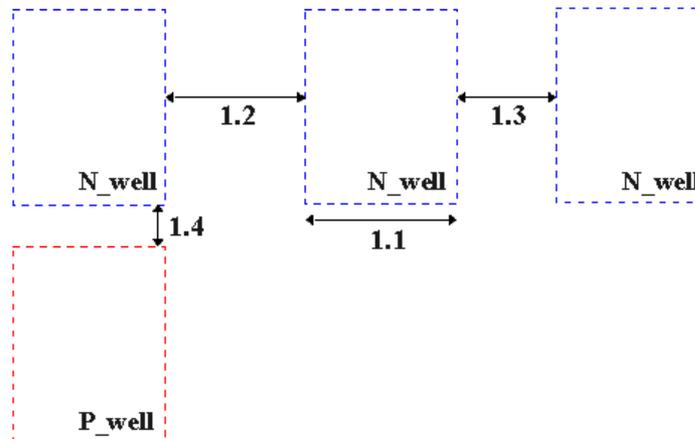


Table 5: Technology-code Map

| Technology code with link to layer map | Layers |
|--|--|
| <u>SCNE</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNA</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Pbase</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNPC</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly_cap</u> , <u>Poly</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCN3M</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block (Agilent/HP only)</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |
| → <u>SCN3ME</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |

SCMOS Layout Rules - Active

| Rule | Description | Lambda | | |
|------|---|--------|------|------|
| | | SCMOS | SUBM | DEEP |
| 2.1 | Minimum width | 3 * | 3 * | 3 |
| 2.2 | Minimum spacing | 3 | 3 | 3 |
| 2.3 | Source/drain active to well edge | 5 | 6 | 6 |
| 2.4 | Substrate/well contact active to well edge | 3 | 3 | 3 |
| 2.5 | Minimum spacing between non-abutting active of different implant. Abutting active ("split-active") is illustrated under Select Layout Rules . | 4 | 4 | 4 |

* Note: For analog and critical digital designs, MOSIS recommends the following minimum MOS channel widths (active under poly) for AMIS designs. Narrower devices, down to design rule minimum, will be functional, but their electrical characteristics will not scale, and their performance is not predictable from MOSIS SPICE parameters.

| Process | Design Technology | Design Lambda (micrometers) | Minimum Width (lambda) |
|-----------|-------------------------|-----------------------------|------------------------|
| AMI_ABN | SCNA, SCNE | 0.80 | 5 |
| AMI_C5F/N | SCN3M, SCN3ME | 0.35 | 9 |
| AMI_C5F/N | SCN3M_SUBM, SCN3ME_SUBM | 0.30 | 10 |

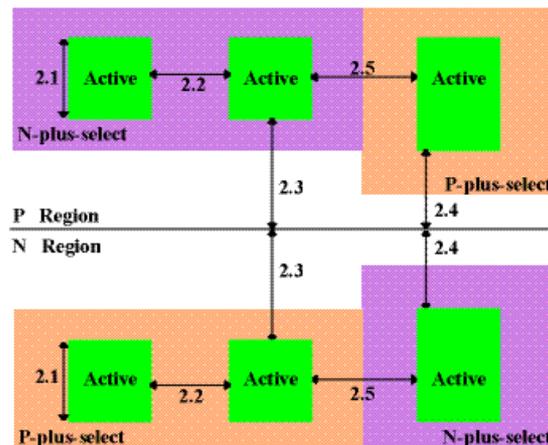


Table 5: Technology-code Map

| Technology code with link to layer map | Layers |
|--|--|
| <u>SCNE</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNA</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Pbase</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNPC</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly_cap</u> , <u>Poly</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCN3M</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block (Agilent/HP only)</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |
| → <u>SCN3ME</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |

SCMOS Layout Rules - Poly

| Rule | Description | Lambda | | |
|-------|----------------------------------|--------|------|------|
| | | SCMOS | SUBM | DEEP |
| 3.1 | Minimum width | 2 | 2 | 2 |
| 3.2 | Minimum spacing over field | 2 | 3 | 3 |
| 3.2.a | Minimum spacing over active | 2 | 3 | 4 |
| 3.3 | Minimum gate extension of active | 2 | 2 | 2.5 |
| 3.4 | Minimum active extension of poly | 3 | 3 | 4 |
| 3.5 | Minimum field poly to active | 1 | 1 | 1 |

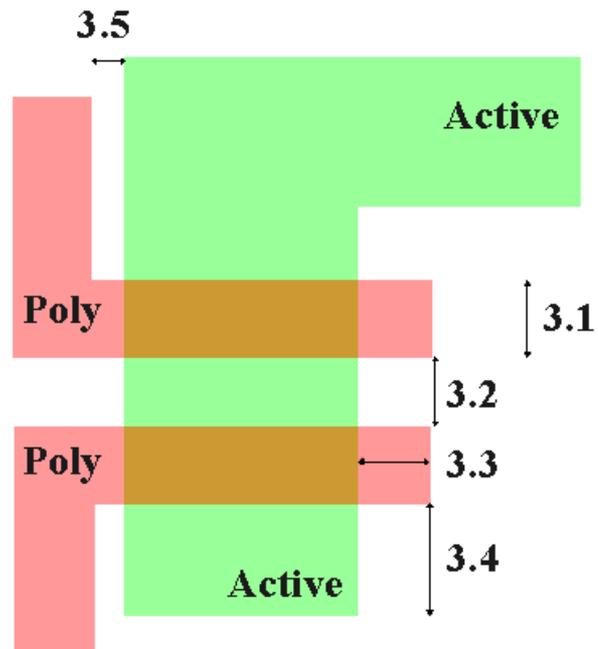


Table 5: Technology-code Map


| Technology code with link to layer map | Layers |
|--|--|
| <u>SCNE</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNA</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Contact</u> , <u>Pbase</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCNPC</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly_cap</u> , <u>Poly</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Glass</u> |
| <u>SCN3M</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block (Agilent/HP only)</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |
| → <u>SCN3ME</u> | <u>N_well</u> , <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Poly2</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u> |

Select – Active(moat) Concepts

- Note that there is no n-active or p-active masks
- n-channel devices which need n-active are created by overlaying active with n-select
- p-channel devices which need p-active are created by overlaying active with p-select
- n-select and p-select masks are somewhat larger than the desired n-active and p-active regions

SCMOS Layout Rules - Select

| Rule | Description | Lambda | | |
|------|--|--------|------|------|
| | | SCMOS | SUBM | DEEP |
| 4.1 | Minimum select spacing to channel of transistor to ensure adequate source/drain width | 3 | 3 | 3 |
| 4.2 | Minimum select overlap of active | 2 | 2 | 2 |
| 4.3 | Minimum select overlap of contact | 1 | 1 | 1.5 |
| 4.4 | Minimum select width and spacing (Note: P-select and N-select may be coincident, but must <i>not</i> overlap) (not illustrated) | 2 | 2 | 4 |

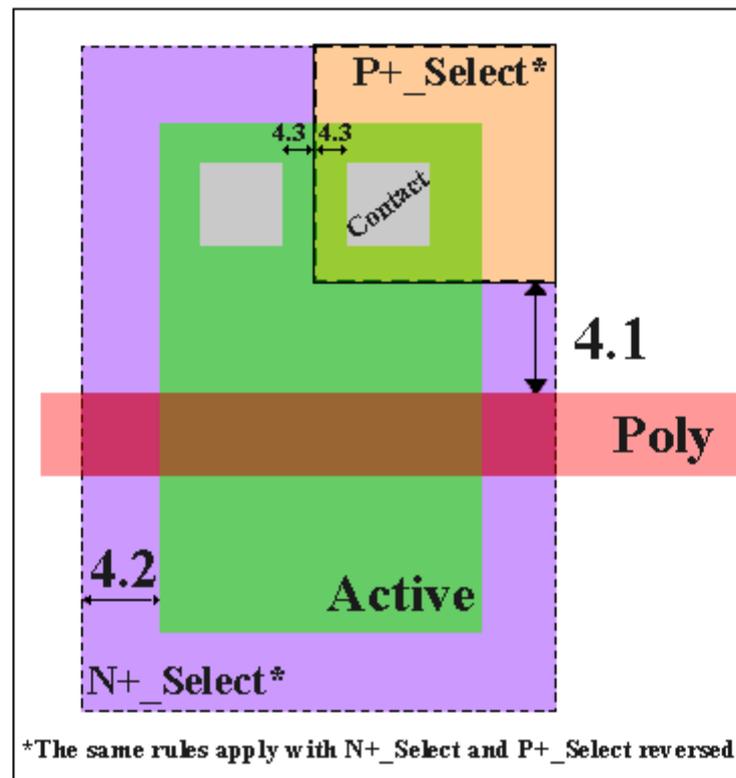



Stay Safe and Stay Healthy !

End of Lecture 8